

### Operating with Beolink 1000

Beolink 1000 does not have as many keys as the receiver's original remote control. Thus certain Beolink 1000 keys have got alternative functionality. To get to this **PLAY** has to be pressed first, i.e. **PLAY** followed by **PLAY** on a Beolink 1000 corresponds to OK on the original remote control.

The table shows how special Beolink 1000 key operations translate to operations of the original remote control.

To be able to operate the receiver correctly with the Beolink 1000 the user has to be familiar with operations with the original remote control as described in the receiver's user manual.

The receiver is automatically turned on when selecting its source on the TV with Vtape, DVD, Vaux etc. We call this function **SOURCE**.

There is therefore no physical button on the Beolink 1000 named source.

### Beolink 1000 Operation





<b>PLAY</b>	<b>PLAY</b>	OK
<b>GOTO</b>		Video
<b>STOP</b>		TV
<b>STORE</b>		Exit
<b>RECORD</b>		Radio

<b>PLAY</b>	<b>▲</b>	Bouquet+
<b>PLAY</b>	<b>▼</b>	Bouquet-
<b>PLAY</b>	<b>◀</b>	<
<b>PLAY</b>	<b>▶</b>	>

<b>PLAY</b>	<b>1</b>	Menu
<b>PLAY</b>	<b>2</b>	Audio
<b>PLAY</b>	<b>3</b>	Info
<b>PLAY</b>	<b>4</b>	Help
<b>PLAY</b>	<b>5</b>	Text

<b>SOURCE</b>		Power on
<b>SOURCE</b>	<b>STOP</b>	Power off

### Beolink 1000 Function

<b>SHIFT</b>	<b>◀</b>	
<b>SHIFT</b>	<b>▶</b>	
<b>SHIFT</b>	<b>▲</b>	
<b>SHIFT</b>	<b>▼</b>	

Beocompatible Operation via  
**Oneremote Interface Type 2415**  
for **Dreambox DM 7000**

Beo4 and Beolink 1000 are remote control terminals from Bang & Olufsen. Oneremote supplies interface modules that allow third party equipment to be operated via a Bang & Olufsen remote control system.



## Congratulations

With the interface module INT2 from [www.oneremote.dk](http://www.oneremote.dk) installed inside your satellite receiver and connected to a Bang & Olufsen TV you can operate the receiver with your Bang & Olufsen remote control terminal.

This user guide tells you how.

## Plug and Play

The receiver can be connected directly to a vacant linkequipped AV socket on the Bang & Olufsen TV.

Following the correct programming of the AV connection the receiver is ready to operate. For programming of the AV connection check the Bang & Olufsen TV User Manual.

If the Bang & Olufsen TV does not have a vacant useable AV socket a Oneremote AV Selector can be supplied.

## Bang & Olufsen Remote Controls

With your beocompatible\* receiver connected to a Bang & Olufsen TV you may operate it with your Beolink 1000, 5000, 7000 or Beo4.


 
 
With Beo4 the operation is slightly easier. Thus Beo4 is the recommended remote control for this receiver.

## Operation in a Beolink Videosystem

In a Bang & Olufsen Beolink videosystem full operability is ensured in all link rooms.

*\*Beocompatible means that the equipment can be operated with a Bang & Olufsen remote control when connected to a Bang & Olufsen TV.*

## Operating with Beo4


Beo4 does not have as many keys as the receiver's original remote control. Thus certain Beo4 keys have got alternative functionality. To get to this  has to be pressed first, i.e.  followed by  on a Beo4 corresponds to OK on the original remote control.

The table shows how special Beo4 key operations translate to operations of the original remote control.

To be able to operate the receiver correctly with the Beo4 the user has to be familiar with operations with the original remote control as described in the receiver's user manual.

The receiver is automatically turned on when selecting its source on the TV with Vtape, DVD, Vaux etc. We call this function **SOURCE**.

There is therefore no physical button on the Beo4 named source.

Beo4	Operation
<b>STOP</b> <b>EXIT</b>	TV Exit
   	 Dream Text Info Radio
 	OK
   	 Bouquet+  Bouquet-  < / AV  > / -/--
   	<b>1</b> Menu <b>2</b> Audio <b>3</b> Info <b>4</b> Help
<b>SOURCE</b> <b>SOURCE</b>	Power on <b>STOP</b> Power off