





 


Beo4 and Beolink 1000 are remote control terminals from Bang & Olufsen. OneRemote supplies interface modules that allow third party equipment to be operated via a Bang & Olufsen remote control system.

Beokompatible functions
OneRemote Interface type 2506















Sony DVDR/ HDD









Daily use

 	Enter
	Tools
	Return
	P+
	P-
 	HDD
 	DVD
 	Top Menu
 	Title list
 	Display
	Clear




 






Playback operations

		Play <i>press 1 sec.</i>
 		Play <i>alternative</i>
		Stop
 		Pause
 		Rew
 		FF
 		Next
 		Previous

Recording operations

 	Record
 	Timer list
 	Timer

Other operations

 	Time/ Text
 	Menu <i>alternativ</i>
 	Input select
 	Subtitle
 	Power <i>manual</i>

Operating using a Beolink 1000 or other old remote controllers.

The device cannot be operated with a Beolink 1000 remote control.

Congratulations

With a OneRemote INT controller from www.oneremote.dk built in to your device, you can connect the device to any Bang & Olufsen TV and fully operate it your Bang & Olufsen remote control terminal. This guide explains how.

INT internal controller -how it works

A OneRemote INT controller is a small microcomputer, which is specifically made to be built in to a non Bang & Olufsen device, equipped with a Scart output socket. This could be a Satellite receiver, DVD player etc.

A Bang & Olufsen TV receives IR data from its remote control, a Beolink1000, Beo4, Beo5 or another.

When a Scart source is selected on the B&O TV, where a device with an INT controller is connected, the TV echoes control data from the remote control to the device. These data is retransmitted via this Scart connection to the device. Control data flows through the existing Scart cable, therefore no further cables is needed.

With a OneRemote OneWay or TwoWay cable, the device can be placed up to 25 metres away from the TV. It could be placed in another room, under a sofa or where ever it suits, as operation is handled via the Scartcable.

If both the TV and the device are equipped with a HDMI connection, a HDMI cable can be added to improve picture and sound quality.

The microcomputer then translates the B&O control data, to data that controls the specific device that it is built into.


If the Bang & Olufsen TV that the device is connected to is the main TV of a Beolink system, all link rooms can get to the device and even operate it.

OneRemote operation in a B&O system

To be able to operate the device correctly with the Beo4 the user has to be familiar with operations with the original remote control as described in the device's user manual.

The beo4 remote control is not equipped with many keys, so we have designed a 'layout' that works logically, even when shifting between different devices. To get a universal layout for different devices, we needed to redefine a few of the beo4 buttons to other functions:

- ***Coloured buttons.***

To make room for important functions, we have moved the coloured buttons, to a lower layer. To send a 'red' button command  must be pressed before the red button. The same goes with the other 3 coloured buttons. This way we have freed the direct function of the coloured buttons, to important operations.

In a OneRemote environment the red button is used as Back, Backup or return. The green button is used as EPG, Guide or similar. Finally the blue and yellow button is used for programme stepping.

- ***Programme stepping, up/ down manoeuvring in menus.***


Most set top boxes or TV's has 4 arrow buttons for moving up, down, left and right in on screen menus. In addition they have separate *programme stepping* buttons for zapping through programmes. B&O remote control does not have separate buttons for programme zapping and menu manoeuvring.

We therefore have chosen the direct blue and yellow buttons to be used as programme stepping buttons. The four up, down, left and right buttons have been assigned for manoeuvring in on screen menus, in our basic setup.

It is possible to use the up and down arrow for programme stepping.

See page 6 about option programming.

- ***Go or Record shifted operation.***

Some of the buttons has been assigned 2 or three functions. To get to these they have to be preceded with  or **STOP**.

Buttons that has been assigned secondary functions on this controller can be seen in the operating table on page 2.

Option programming

The OneRemote controller inside your device can be programmed with different options, to fit different setup and needs.

An option programming is done by pressing a series of buttons in a special scheme that does not occur during daily use. A programming must be ended within 3 seconds.

To abort an ongoing programming sequence, press any other button than **STOP** or the numeric buttons **0** to **9**.

Option 7x – auto power off enable.

In some cases it is not wanted that the device automatically powers off, when the TV is powered off. Use this option to enable or disable this.

STOP STOP STOP STOP STOP STOP 7 1

Device powers off with TV.

STOP STOP STOP STOP STOP STOP 7 0

Device never powers off.

Option 8x – menu button block enable.

Some B&O TVs not only echoes the MENU button from the remote control to the device attached to the Scart socket. It also opens the TV's own ON-screen menu. Use this option to avoid that the device acts on this command, if your setup has this conflict.

STOP STOP STOP STOP STOP STOP 8 1

Use the MENU button.

STOP STOP STOP STOP STOP STOP 8 0

Ignore the Menu button..

one>remote

2506u2uk