

Beo4 og Beolink 1000 er fjernbetjeningsterminaler fra Bang & Olufsen . Oneremote producerer interface modules, which makes it possible to control third party devices through a Bang & Olufsen system.



### New possibilities

Your new B&O compatible\* Homedock de luxe for iPod can, through a built-in interface module from [www.oneremote.eu](http://www.oneremote.eu) and connected to a Bang & Olufsen TV set, be controlled with your ordinary Bang & Olufsen remote control.

This user guide tells you how!

### Plug 'n play

Homedock de luxe is connected to a link compatible Scart AV connector on the Bang & Olufsen TV set with the premounted scart cable.

After activating the AV connector correctly, the Homedock is ready for use. See the users guide for your TV set for further information.

If your TV set does not have a spare AV connector, we recommend that you use a OneRemote AV Selector, which adds more AV connector to your system.

### Bang & Olufsen remote controls

If connected correctly to your Bang & Olufsen TV set, the Homedock can be controlled through your TV set with either Beolink 1000, 5000, 7000 or Beo4.

The Beo4 makes it more simple to use your Homedock. That is why we recommend the Beo4.

### Homedock in a Beolink video system

In a Bang & Olufsen Beolink video system, where the main video- and/or DVD player can be controlled through the connected Bang & Olufsen TV sets, you will get full control from all link rooms.

Homedock de luxe is connected to a B&O TV set as a VMEM, Vtape, DTV, SAT, AUX or similar source. If the TV set is part of a link system, the Homedock is shown and controlled like similar devices from link rooms.

*\*B&O compatible means that the device can be controlled with a Bang & Olufsen remote control when connected to a Bang & Olufsen TV set.*

### Using the B&O remote control

Due to the fact that the Beo4 does not have as many buttons as the Homedock remote, some of the buttons on the Beo4 have more than one function.



To go to the alternative function of a button you must press the **EXIT** button.

**EXIT** followed by **7** on a Beo4 is similar to "Volume down" on the original remote control.

In the overview to the right, you will see a comparison table for special button combinations for the Beo4.

To achieve optimal control with a Beo4 it is necessary to be familiar with the original remote for the Homedock. The functions and control sequences of the Homedock remote control are found in the Homedock user guide.

The Homedock is automatically turned on when the desired AV input on the TV set is chosen. This source can be VMEM, DTV, VTape DVD, SAT etc.

Beo4	Funktion
 <b>0</b>	Enter Play - pause
<b>1</b>	Repeat
<b>2</b>	Shuffle
<b>3</b>	Mode
	Prev/ Next/ Rew/ FF Select playlist
<b>9</b>	Power
<b>EXIT</b> <b>7</b>	Volume down
<b>EXIT</b> <b>8</b>	Volume up

### Using older remote controls

<b>PLAY</b>	Enter
<b>SHIFT</b> <b>&lt;&lt;</b>	Playlist -
<b>SHIFT</b> <b>&gt;&gt;</b>	Playlist +
<b>SHIFT</b> <b>▲</b>	Previous
<b>SHIFT</b> <b>▼</b>	Next