

Operating with Beolink 1000

Beolink 1000 does not have as many keys as the DVD recorder's original remote control. Thus certain Beolink 1000 keys have got alternative functionality.

To get to this **PLAY** has to be pressed first, i.e. **PLAY** followed by **9** on a Beolink 1000 corresponds to "Power" on the original remote control.

The table shows how special Beolink 1000 key operations translate to operations of the original remote control.

To be able to operate the DVD recorder correctly with the Beolink 1000 the user has to be familiar with operations with the original remote control as described in the DVD recorder's user manual.

The DVD recorder is automatically turned on when selecting its **SOURCE** on the TV.

The **SOURCE** can be VTAPE, DVD, SAT, V.Mem, DTV etc.

There is no key on a Beolink 1000 marked **SOURCE**.

Beolink 1000	Funktion
PLAY PLAY	Play
PLAY STOP	Pause
GOTO	OK
PLAY GOTO	FSS
STORE	Monitor
PLAY STORE	Record mode
PLAY ◀	Previous
PLAY ▶	Next
PLAY ▲	Disc menu
PLAY ▼	System menu
PLAY 0	Clear
PLAY 2	OTR
PLAY 3	Play mode
PLAY 4	Timer
PLAY 5	Select
PLAY 6	T/C
PLAY 7	Return
PLAY 8	Audio
PLAY 9	Power
SOURCE STOP	Power off
SOURCE	Power on

Beocompatible* Operation via
Oneremote Interface Type 2789
 for Philips DVD-R



Congratulations

With the EXT interface module from www.oneremote.dk connected to your DVD recorder and a Bang & Olufsen TV you can operate it with your Bang & Olufsen remote control terminal. This user guide tells you how.

Plug and Play

The DVD recorder can be connected directly to a vacant linkequipped AV socket on the Bang & Olufsen TV with the special EXT scart connection cable and adaptor.

Following the correct programming of the AV connection the DVD recorder is ready to operate. For programming of the AV connection check the Bang & Olufsen TV User Manual.

If the Bang & Olufsen TV does not have a useable vacant AV socket a Oneremote AV Selector can be supplied.

Bang & Olufsen Remote Controls

With your beocompatible* DVD recorder connected to a Bang & Olufsen TV you may operate it with your Beolink 1000, 5000, 7000 or Beo4.



With Beo4 the operation is slightly easier.

Thus Beo4 is the recommended remote control for this DVD recorder.

Operation in a Beolink Videosystem

In a Bang & Olufsen Beolink videosystem full operability is ensured in all link rooms.

Operating with Beo4

Beo4 does not have as many keys as the DVD recorder's original remote control. Thus certain Beo4 keys have got alternative functionality. To get to this  has to be pressed first, i.e.  followed by **STOP** on a Beo4 corresponds to PAUSE on the original remote control.


The table shows how special Beo4 key operations translate to operations of the original remote control.

To be able to operate the DVD recorder correctly with the Beo4 the user has to be familiar with operations with the original remote control as described in the DVD recorder's user manual.

The DVD recorder is automatically turned on when selecting its **SOURCE** on the TV.

The **SOURCE** can be VTAPE, DVD, SAT, V.Mem, DTV etc.

There is no key on a Beo4 marked **SOURCE** .

Beo4	Funktion
   STOP	Play Pause
   	Select OK Timer Audio
EXIT	Cancel
   	Return Clear Record Mode Audio
   	Previous Next Disc menu System menu
   	OTR Play mode T/C Power
SOURCE SOURCE STOP	Power on Power off