

Beocompatible* Operation via
Oneremote Interface Type 2825
for Sky+



Congratulations

With the EXT interface module from www.oneremote.dk connected to your receiver and a Bang & Olufsen TV you can operate it with your Bang & Olufsen remote control terminal. This user guide tells you how.

Plug and Play

The receiver can be connected directly to a vacant linkequipped AV socket on the Bang & Olufsen TV with the special EXT scart connection cable and adaptor. The powersupply connects to the EXT and the mains.

The EXT IR diode is taped underneath the receiver as close as possible to the front and the receiver's own IR receiver.

Following the correct programming of the AV connection the DVD recorder is ready to operate. For programming of the AV connection check the Bang & Olufsen TV User Manual.

If the Bang & Olufsen TV does not have a useable vacant AV socket a Oneremote AV Selector can be supplied.

Bang & Olufsen Remote Controls

With your beocompatible* receiver connected to a Bang & Olufsen TV you may operate it with your Beolink 1000, 5000, 7000 or Beo4.


 

With Beo4 the operation is slightly easier.

Thus Beo4 is the recommended remote control for this DVD recorder.

Operation in a Beolink Videosystem

In a Bang & Olufsen Beolink videosystem full operability is ensured in all link rooms.

Operating with Beo4

Beo4 does not have as many keys as the receiver's original remote control. Thus certain Beo4 keys have got alternative functionality. To get to this  has to be pressed first, i.e.  followed by  on a Beo4 corresponds to PAUSE on the original remote control.

The table shows how special Beo4 key operations translate to operations of the original remote control.

To be able to operate the receiver correctly with the Beo4 the user has to be familiar with operations with the original remote control as described in the receiver's user manual.

**1 Up and down arrows.*






















 








These keys each has two functions. For programme zapping and moving the cursor when in a on-screen menu.

*When choosing a menu i.e. TV guide, the function of these keys change to **menumode**.*

*If these keys are preceded with an O the function will change to **programme step mode**.*

**2 Source key.*

We name the key used to select the input on the TV to acces the receiver, the source key. This could be V.tape, V.aux, V.mem or another input.

Beo4	Function
  EXIT	Select Backup
 	CH+ *1 CH- *1
 	Play
 	Backup
 	CH+ *1
 	CH- *1
 	TV-guide
 	Pause
 	<<
 	>>
 	Help
 	Info
 	Power
 	Pause
 	Record *2