

OneRemote DabFmBlue1

Advanced tuner for Bang & Olufsen systems handling


DAB/DAB+ – FM - Bluetooth














User Guide

Control with Bang & Olufsen remotes



DAILY OPERATION WITH BANG & OLUFSEN REMOTES

Go to "Older Bang & Olufsen Remotes" if  is not a key on your remote.

-   Press twice to select
-  Switch to DAB reception
-  Switch to Bluetooth
-   Menu
-   Maneuvering in menus
-   Maneuvering in menus
-  –  Select a preset channel
-  Stand by key

Contents

Daily Operation with Bang & Olufsen Remotes	2
Alternative Controls with Bang & Olufsen Remotes	Fejl! Bogmærke er ikke defineret.
Get Started – Quick Guide	4
Presets - Favorite Channels	5
SELECT OPERATION	6
DAB+ Channels.....	6
FM Channels	6
Bluetooth	7
MAIN MENU	7
OLDER BANG & OLUFSEN REMOTES.....	7
Daily Operation with Older Bang & Olufsen Remotes	8
Alternative Controls with Older Bang & Olufsen Remotes	8

GET STARTED – QUICK GUIDE

Advanced OneRemote circuitry has been added to this tuner, OneRemote DabFmBlue1, enabling it to be part of a remotely controlled Bang & Olufsen system. Complete control is obtained with a Bang & Olufsen remote control terminal.


- DabFmBlue1 is a beocompatible tuner
- DabFmBlue1 may be controlled by any Bang & Olufsen system remote from 1988 and on.
- DabFmBlue1 may be controlled via the app UNDOK in iPhones, iPods, iPads or in Android phones and tablets.

DabFmBlue1 may be connected to any Bang & Olufsen system and controlled by Bang & Olufsen remotes.

When switching on the DabFmBlue1 with a Bang & Olufsen remote the Bang & Olufsen system is switched on too and the input with the DabFmBlue1 automatically selected.

If the DabFmBlue1 is to be used only for handling DAB+, FM channels or music via Bluetooth, no further installation is required.

DabFmBlue1 is connected to the system input that is selected by pressing **AMEM** or **ATAPE** on the Bang & Olufsen remote.

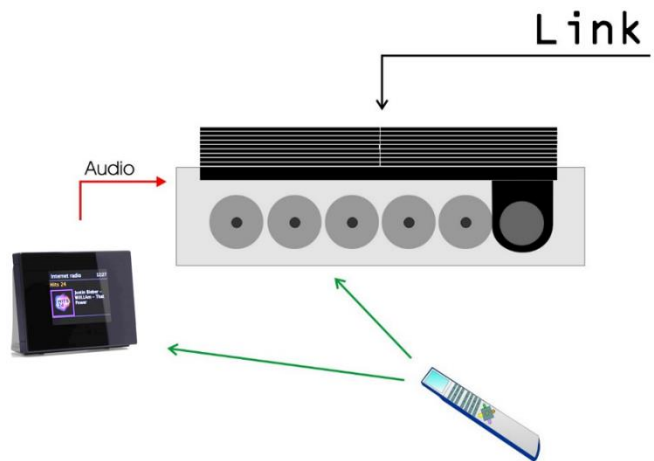

If the Bang & Olufsen system has no AMEM or ATAPE operated input available, the DabFmBlue1 needs to be connected to a different input socket and reprogramming of the DabFmBlue1 is required accordingly. **See the Installation Guide.**

- *Bang & Olufsen link-systems not only allow for listening to system sources from the main room in any connected link room but also controlling them remotely. Thus a link connected kitchen speaker not only plays music from the main room, but allows for control of the system. DabFmBlue1 may be part of that system. **See the Installation Guide.***

PRESETS - FAVORITE CHANNELS


Enter favorite channels as presets selectable by pressing single digits on a Bang & Olufsen remote.





A total of 10 presets are available for FM, DAB+ and Internet Radio each. Presets may be changed at any time by pressing a single key on the Bang & Olufsen remote.

SELECT OPERATION

DAB+ CHANNELS



Switch on the DabFmBlue1 tuner with the Bang & Olufsen remote by pressing the key selected to handle the tuner on the Bang & Olufsen system.

Press  and DabFmBlue1 shifts to reception of **DAB radio**.

Select one of the presets by pressing a digit  – , or press  or  to display a list of the available DAB channels.

The preset number and the signal quality are displayed at the very bottom of the display.

Other control options during DAB handling:

	Info		Save preset
	Rescan for stations		DRC

FM CHANNELS

Switch on the DabFmBlue1 tuner with the Bang & Olufsen remote by pressing the key selected to handle the tuner on the Bang & Olufsen system.

Press  or  and DabFmBlue1 shifts to reception of **FM Radio**.

Select one of the presets by pressing a digit  – .

Press to display a list of the available channels.

The preset number and the signal quality are displayed at the very bottom of the display.


If the FM disable option is set, it is not possible to select FM reception.


Other control options during FM handling:

	Info		Save preset
			Set frequency.

BLUETOOTH

Switch on the DabFmBlue1 tuner with the Bang & Olufsen remote by pressing the key selected to handle the tuner on the Bang & Olufsen system.



Press  to select reception via **Bluetooth**.

The Bluetooth logo  flashing on the DabFmBlue1 tuner's display indicates the tuner waiting for connection to a source.

Switch on a Bluetooth source and pair it with the DabFmBlue1 tuner. If a password is required, use 0000.

 flashing stops with completed pairing

MAIN MENU


  Gives access to the main menu. The menu consist of a single line, in the bottom of the display. When chosen different receiver options are available.


Adjustment in this menu is required only under installation.

OLDER BANG & OLUFSEN REMOTES

The DabFmBlue1 tuner may be controlled by all Bang & Olufsen system remotes.

Through the years Bang & Olufsen has marketed various models, where keys have been added or removed. Some keys have just changed names.

As an example the **PLAY** key has been replaced by the  key.

If the remote does **NOT** have a  key or a small joystick, control the DabFmBlue1 tuner in accordance with below tables.

DAILY OPERATION WITH OLDER BANG & OLUFSEN REMOTES

PLAY	PLAY	Press twice to select	
⏪		Switch to DAB reception	
⏩		Switch to Bluetooth	
PLAY	▼	Switch to FM reception	
PLAY	▲	Menu	
▲	»	Maneuvering in menus	
▼	«	Maneuvering in menus	
0	–	9	Select a preset

ALTERNATIVE CONTROLS WITH OLDER BANG & OLUFSEN REMOTES

PLAY	1	Store channel playing as preset 1
PLAY	2	Store channel playing as preset 2
PLAY	3	Store channel playing as preset 3
PLAY	4	Store channel playing as preset 4
PLAY	5	Store channel playing as preset 5
PLAY	6	Store channel playing as preset 6
PLAY	7	Store channel playing as preset 7
PLAY	8	Store channel playing as preset 8
PLAY	9	Store channel playing as preset 9
PLAY	0	Store channel playing as preset 10