

# OneRemote DabFmBlue3

Advanced tuner for Bang & Olufsen systems handling


**DAB/DAB+ – FM - Bluetooth**

## User Guide

**Control with Bang & Olufsen remotes**



## DAILY OPERATION WITH BANG & OLUFSEN REMOTES

Go to "Older Bang & Olufsen Remotes" if  is not a key on your remote.



Press twice to select



Switch to DAB reception \*1



Switch to Bluetooth \*1



Switch to FM reception \*1 \*2



Info and Antenna quality

**EXIT**

Switch between sources DAB+/ FM/ BT

**MENU**

Setup

**0** – **9**

Select a preset channel



Stand by key

 **1**

Save the station listened to as Preset 1

 **2**

Save the station listened to as Preset 2

 **3**

Save the station listened to as Preset 3

 **4**

Save the station listened to as Preset 4

 **5**

Save the station listened to as Preset 5

 **6**

Save the station listened to as Preset 6

 **7**

Save the station listened to as Preset 7

 **8**

Save the station listened to as Preset 8

 **9**

Save the station listened to as Preset 9

 **0**

Save the station listened to as Preset 10

\*1 If power have been removed, it might be necessary to use **EXIT** or **STORE** to resync the controller to select the correct source.

\*2 FM selection have been disabled as default factory setting. Se the installation guide.

## Contents

Daily Operation with Bang & Olufsen Remotes .....	2
Get Started – Quick Guide .....	4
Presets - Favorite Channels .....	5
<b>SELECT OPERATION .....</b>	<b>6</b>
DAB+ Channels.....	6
FM Channels .....	7
Bluetooth .....	7
<b>MAIN MENU .....</b>	<b>8</b>
<b>OLDER BANG &amp; OLUFSEN REMOTES.....</b>	<b>8</b>
Daily Operation with Older Bang & Olufsen Remotes .....	9
Alternative Controls with Older Bang & Olufsen Remotes .....	9

## GET STARTED – QUICK GUIDE

Advanced OneRemote circuitry has been added to this tuner, OneRemote DabFmBlue3, enabling it to be part of a remotely controlled Bang & Olufsen system. Complete control is obtained with a Bang & Olufsen remote control terminal.


- DabFmBlue3 is a beocompatible tuner
- DabFmBlue3 may be controlled by any Bang & Olufsen system remote from 1988 and on.
- DabFmBlue3 may be controlled via the app UNDOK in iPhones, iPods, iPads or in Android phones and tablets.

DabFmBlue3 may be connected to any Bang & Olufsen system and controlled by Bang & Olufsen remotes.

When switching on the DabFmBlue3 with a Bang & Olufsen remote the Bang & Olufsen system is switched on too and the input with the DabFmBlue3 automatically selected.

If the DabFmBlue3 is to be used only for handling DAB+, FM channels or music via Bluetooth, no further installation is required.

DabFmBlue3 is connected to the system input that is selected by pressing **AMEM** or **ATAPE** on the Bang & Olufsen remote.

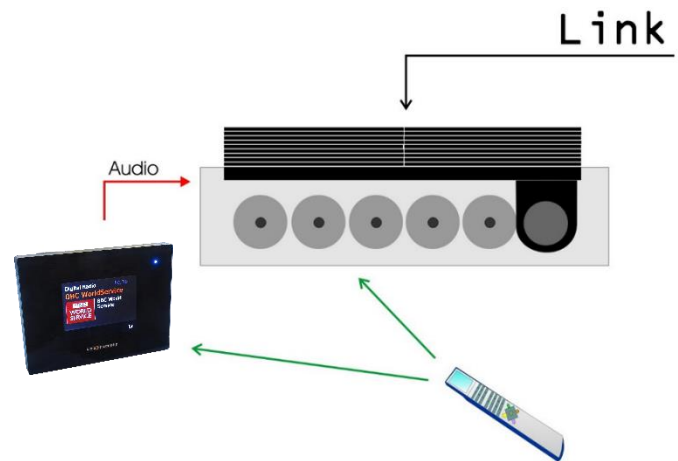

If the Bang & Olufsen system has no AMEM or ATAPE operated input available, the DabFmBlue3 needs to be connected to a different input socket and reprogramming of the DabFmBlue3 is required accordingly. **See the Installation Guide.**

- *Bang & Olufsen link-systems not only allow for listening to system sources from the main room in any connected link room but also controlling them remotely. Thus a link connected kitchen speaker not only plays music from the main room, but allows for control of the system. DabFmBlue3 may be part of that system. **See the Installation Guide.***

## PRESETS - FAVORITE CHANNELS


Enter favorite channels as presets selectable by pressing single digits on a Bang & Olufsen remote.

A total of 10 presets are available for FM, DAB+ and Internet Radio each. Presets may be changed at any time by pressing a single key on the Bang & Olufsen remote.





## SELECT OPERATION

### DAB+ CHANNELS

Switch on the DabFmBlue3 tuner with the Bang & Olufsen remote by pressing the key selected to handle the tuner on the Bang & Olufsen system.

Press  and DabFmBlue3 shifts to reception of **DAB radio**. \*1

Alternatively press  . \*1

Select one of the presets by pressing a digit  – , or press  or  to display a list of the available DAB channels.

The preset number and the signal quality are displayed at the very bottom of the display.

Other control options during DAB handling:


---

	Info		
	Info		Save preset
	Rescan for stations		DRC

\*1 if another source than DAB is shifted to, the system is out of sync. Then press **EXIT** or **GOTO** to restore sync.

## FM CHANNELS

Switch on the DabFmBlue3 tuner with the Bang & Olufsen remote by pressing the key selected to handle the tuner on the Bang & Olufsen system.

Press  and DabFmBlue3 shifts to reception of **FM radio**. \*1

Alternatively press  . \*1

Select one of the presets by pressing a digit  – .

The preset number and the signal quality are displayed at the very bottom of the display.

If the FM disable option is set, it is not possible to select FM reception.


Other control options during FM handling:

	Info			Set frequency.
 	Info		 – 	Save preset


\*1 if another source than DAB is shifted to, the system is out of sync. Then press **EXIT** or **GOTO** to restore sync.

## BLUETOOTH

Switch on the DabFmBlue3 tuner with the Bang & Olufsen remote by pressing the key selected to handle the tuner on the Bang & Olufsen system.

Press  to select reception via **Bluetooth**.

Alternatively press  . \*1

The Bluetooth logo  flashing on the DabFmBlue3 tuner's display indicates the tuner waiting for connection to a source.

Switch on a Bluetooth source and pair it with the DabFmBlue3 tuner. If a password is required, use 0000.

 flashing stops with completed pairing

\*1 if another source than DAB is shifted to, the system is out of sync. Then press **EXIT** or **GOTO** to restore sync.

## MAIN MENU


**MENU** or **STORE** gives access to the main menu. When chosen different receiver options are available.


Adjustment in this menu is required only under installation.

## OLDER BANG & OLUFSEN REMOTES

The DabFmBlue3 tuner may be controlled by all Bang & Olufsen system remotes.

Through the years Bang & Olufsen has marketed various models, where keys have been added or removed. Some keys have just changed names.

As an example the **PLAY** key has been replaced by the  key.

If the remote does **NOT** have a  key or a small joystick, control the DabFmBlue3 tuner in accordance with below tables.



## DAILY OPERATION WITH OLDER BANG & OLUFSEN REMOTES

**PLAY** **PLAY** Press twice to select

**PLAY** **◀** DAB reception

**PLAY** **▶** Bluetooth reception

**PLAY** **▼** FM Reception

**STORE** Setup Menu

**0** – **9** Select a preset

## ALTERNATIVE CONTROLS WITH OLDER BANG & OLUFSEN REMOTES

**PLAY** **1** Store channel playing as preset 1

**PLAY** **2** Store channel playing as preset 2

**PLAY** **3** Store channel playing as preset 3

**PLAY** **4** Store channel playing as preset 4

**PLAY** **5** Store channel playing as preset 5

**PLAY** **6** Store channel playing as preset 6

**PLAY** **7** Store channel playing as preset 7

**PLAY** **8** Store channel playing as preset 8

**PLAY** **9** Store channel playing as preset 9

**PLAY** **0** Store channel playing as preset 10