

# OneRemote DabFmBlue5

Advanced Tuner for Bang & Olufsen Systems Handling

DAB/DAB+ – FM - Bluetooth - Internet Radio  
Spotify Connect- Music Player









## User Guide

Control with Bang & Olufsen Remotes



## DAILY OPERATION WITH BANG & OLUFSEN REMOTES

Go to "Older Bang & Olufsen Remotes" if there is no colored keys on your remote.

-  Press to select. Press and hold for 1 second.
-   Press twice to select. Mouse double-click.
-  Select Source, DAB+, FM, Bluetooth etc.
-  BACK to previous screen.
-  Favorite Channel List.
-   Save actual radio channel as Favorite wait 2 second


**MENU** Setup menu.



**0** – **9** Select a preset channel.

 Stand by key.

 **4** See channel info.

 **7** Set Bass and Treble.

 Show info about program og antenna quality.  
Press repeatedly.

  Maneuver in menus **or** volume level.  
Volume level **should always** be left at a maximum.

## CONTENT

|   |  |
|---|--|
| Daily Operation with Bang & Olufsen Remotes .....           | 2  |
| <b>GET STARTED – QUICK GUIDE</b> .....                      | <b>4</b>                                 |
| Presets - Favorite Channels .....                           | 5  |
| <b>INTERNET RADIO CHANNELS</b> .....                        | <b>FEJL! BOGMÆRKE ER IKKE DEFINERET.</b> |
| Presets .....   | <b>Fejl! Bogmærke er ikke defineret.</b> |
| Selecting a non-preset Internet Radio station. ....         | <b>Fejl! Bogmærke er ikke defineret.</b> |
| Other control options during Internet Radio handling: ..... | <b>Fejl! Bogmærke er ikke defineret.</b> |
| <b>DAB+ CHANNELS</b> .....                                  | <b>6</b>                                 |
| Presets .....   | 6  |
| Other control options during DAB handling: .....            | 6  |
| <b>FM CHANNELS</b> .....                                    | <b>7</b>                                 |
| Presets .....   | 7  |
| Other control options during DAB handling: .....            | 7  |
| <b>BLUETOOTH</b> .....                                      | <b>8</b>                                 |
| Other control options during Bluetooth handling: .....      | 8  |
| *1 Pairing a Bluetooth device to DabFmBlue5 .....           | 8  |
| <b>PODCASTS</b> .....                                       | <b>FEJL! BOGMÆRKE ER IKKE DEFINERET.</b> |
| Other control options during Podcast handling: .....        | <b>Fejl! Bogmærke er ikke defineret.</b> |
| <b>SPOTIFY</b> .....  | <b>FEJL! BOGMÆRKE ER IKKE DEFINERET.</b> |
| Other control options during Podcast handling: .....        | <b>Fejl! Bogmærke er ikke defineret.</b> |
| <b>MAIN MENU</b> .....                                      | <b>FEJL! BOGMÆRKE ER IKKE DEFINERET.</b> |
| <b>OLDER BANG &amp; OLUFSEN REMOTES</b> .....               | <b>9</b>                                 |
| Daily Operation with Older Bang & Olufsen Remotes .....     | 9  |

## GET STARTED – QUICK GUIDE

This User Manual is intended for the daily use of the tuner. See the Installation Manual for installation.

Advanced OneRemote circuitry has been added to this tuner, OneRemote DabFmBlue5, enabling it to be part of a remotely controlled Bang & Olufsen system. Complete control is obtained with a Bang & Olufsen remote control terminal.


- DabFmBlue5 is a beo-compatible tuner.
- DabFmBlue5 may be controlled by any Bang & Olufsen system remote terminal from 1988 and on.

DabFmBlue5 may be connected to any Bang & Olufsen system and controlled directly by Bang & Olufsen remotes.

When switching on the DabFmBlue5 with a Bang & Olufsen remote the Bang & Olufsen system is switched on too and the input with the DabFmBlue5 automatically selected.

If the DabFmBlue5 is to be used only for handling DAB+, FM channels or music via Bluetooth, no further installation is required.

DabFmBlue5 is connected to the system input that is selected by pressing **AMEM** or **ATAPE** on the Bang & Olufsen remote.

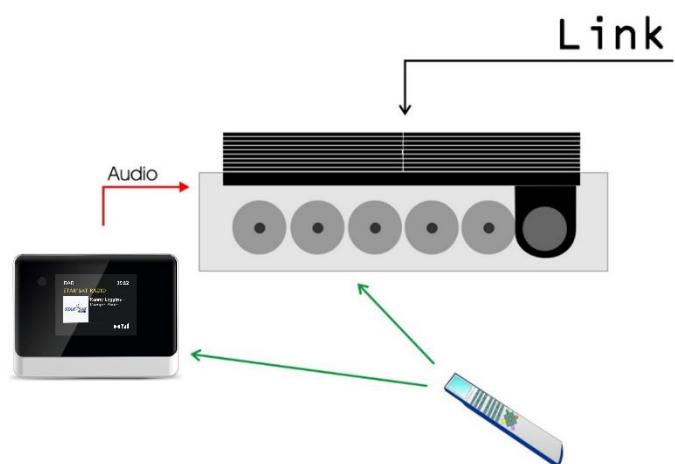

If the Bang & Olufsen system has no **AMEM** or **ATAPE** operated input available, the DabFmBlue5 needs to be connected to a different input socket and reprogramming of the DabFmBlue5 is required accordingly. **See the Installation Manual.**


- *Bang & Olufsen link-systems do not only allow for listening to system sources from the main room from any connected link room, but also for controlling them remotely. Thus, a link connected kitchen speaker plays music from the main room. DabFmBlue5 may be part of that system, controlled via WiFi. See the Installation Manual.*

## PRESETS - FAVORITE CHANNELS

Enter favorite channels as presets selectable by pressing single digits on a Bang & Olufsen remote.


A total of 30 presets are available each for FM, DAB+ and Internet Radio each. Presets may be changed at any time with the Bang & Olufsen remote.

## DAB+ CHANNELS

- Press **ATAPE** or **AMEM** To power on DabFmBlue5 and the B&O radio. \*1
- Press  repeatedly until **DAB** is shown in the display.

## PRESETS







---

- To select a preset **DAB+** channel, simply press a digit **0** – **9** .
- Press  to get a list of the preset channels.

The preset number and the quality of the antenna signal are displayed at the very bottom of the display.


## OTHER CONTROL OPTIONS DURING DAB HANDLING:

---

-   Save the actual channel as a preset.
-  **Back** to return to a previous menu.
-  Displays info about the program listened to and the quality of the antenna.
-  **4** Info
-  **8** Rescan for stations


\*1 The actual B&O system might be setup to use another source than **ATAPE** or **AMEM** .

## FM CHANNELS

- Press **ATAPE** or **AMEM** To power on DabFmBlue5 and the B&O radio. \*1
- Press  repeatedly until **FM** is shown in the upper left corner of the display.

## PRESETS







---

- To select a preset **FM** program, simply press a digit **0** – **9** .
- Press  to get a list of the preset channels.

The preset number and the signal quality are displayed at the very bottom of the display.

## OTHER CONTROL OPTIONS DURING FM HANDLING:


---

-   Save the actual channel as a preset.
-  **Back** to return to a previous menu.
-  Displays info about the program listened to and the quality of the antenna.
-  **4** Info
-  **8** Rescan for stations

\*1 The actual B&O system might be setup to use another source than **ATAPE** or **AMEM** .

## BLUETOOTH

Selecting the Bluetooth mode makes it possible to play music from any paired smartphone, tablet, or other device, via the DabFmBlue5 and the Bang & Olufsen system. \*1

- Press **ATAPE** or **AMEM** To power on DabFmBlue5 and the B&O radio. \*2
- Press  repeatedly until **Bluetooth** is shown in the display.

In the Bluetooth mode all control of the music is handled directly on the transmitting smartphone, tablet or any other Bluetooth connected device.

Playback status and the signal quality are displayed at the very bottom of the display.

### OTHER CONTROL OPTIONS DURING BLUETOOTH HANDLING:

---

 **4** Info

#### \*1 PAIRING A BLUETOOTH DEVICE TO DABFMBLUE5

---

For a smartphone, tablet or any other bluetooth device to be able to send music to the DabFmBlue5, it must be paired with DabFmBlue5.

Pairing is only needed initially, as DabFmBlue5 will remember the bluetooth device.

To pair a bluetooth transmitter with DabFmBlue5:

1. Select the bluetooth mode, as described above.
2. Go to the Setup Menu on the **transmitting** device and look for the bluetooth menu.
3. Shortly after selecting bluetooth, the DabFmBlue5 will show up in the menu as **DIGITRADIO 10 IR**. Select this and music played on the device can be listened to via the Bang & Olufsen system.


\*2 The actual B&O system might be setup to use another source than **ATAPE** or **AMEM**.




## OLDER BANG & OLUFSEN REMOTES

The DabFmBlue5 tuner may be controlled by all Bang & Olufsen system remotes.

Through the years Bang & Olufsen has marketed various models, where keys have been added or removed. Some keys have just changed names.

As an example, the **PLAY** key has been replaced by the  key.

If the remote does **NOT** have a  key or a small joystick, control the DabFmBlue5 tuner in accordance with below tables.

### DAILY OPERATION WITH OLDER BANG & OLUFSEN REMOTES

|                         |   |  |
|-------------------------|---|--|
| <b>PLAY</b> <b>PLAY</b> |   | Press twice to select. <i>Mouse click.</i>   |
| <b>STOP</b>             |   | Select source DAB+, FM Radio, Bluetooth etc. |
| <b>GOTO</b>             |   | Get a list of the preset channels.           |
| <b>STORE</b>            |   | BACK to previous screen.                     |
| <b>PLAY</b>             | ▲ | Favorite Recall                              |
| <b>PLAY</b>             | ▼ | Favorite Save                                |
| <b>PLAY</b> <b>7</b>    |   | Set Bass and Treble.                         |