

OneRemote DabWiFi7

Advanced Tuner for Bang & Olufsen Systems Handling


DAB/DAB+ – FM - Bluetooth - Internet Radio
Spotify Connect- Music Player

User Guide

Control with Bang & Olufsen Remotes



DAILY OPERATION WITH BANG & OLUFSEN REMOTES

Go to "Older Bang & Olufsen Remotes" if  is not a key on your remote.



Press twice to select. Mouse double-click.



 
Select Source, DAB+, Internet Radio, Bluetooth etc.
BACK to previous screen.



Favorite Channel List.
Save actual radio channel as Favorite wait 2 second



Setup menu.



Select a preset channel.



Stand by key.



See channel info.



Set Bass and Treble.



Maneuver in menus **or** volume level.
Volume level should always be left at a maximum.

CONTENT

Daily Operation with Bang & Olufsen Remotes	2
GET STARTED – QUICK GUIDE	4
Presets - Favorite Channels	5
INTERNET RADIO CHANNELS	6
Presets	6
Selecting a non-preset Internet Radio station.	6
Other control options during Internet Radio handling:	6
DAB+ CHANNELS	7
Presets	7
Other control options during DAB handling:	7
FM CHANNELS	8
Presets	8
Other control options during DAB handling:	8
BLUETOOTH	9
Other control options during Bluetooth handling:	9
*1 Pairing a Bluetooth device to DabWiFi7	9
PODCASTS	10
Other control options during Podcast handling:	10
SPOTIFY	11
Other control options during Podcast handling:	11
MAIN MENU	12
OLDER BANG & OLUFSEN REMOTES	13
Daily Operation with Older Bang & Olufsen Remotes	13

GET STARTED – QUICK GUIDE

This User Manual is intended for the daily use of the tuner. See the Installation Manual for installation.

Advanced OneRemote circuitry has been added to this tuner, OneRemote DabWiFi7, enabling it to be part of a remotely controlled Bang & Olufsen system. Complete control is obtained with a Bang & Olufsen remote control terminal.

 
- DabWiFi7 is a beo-compatible tuner.
- DabWiFi7 may be controlled by any Bang & Olufsen system remote terminal from 1988 and on.
- DabWiFi7 may be also controlled via the free app UNDOK in iPhones, iPods, iPads or in Android phones and tablets. Using UNDOK the DabWiFi7 can be controlled from all over the house.

DabWiFi7 may be connected to any Bang & Olufsen system and controlled directly by Bang & Olufsen remotes.

When switching on the DabWiFi7 with a Bang & Olufsen remote the Bang & Olufsen system is switched on too and the input with the DabWiFi7 automatically selected.

If the DabWiFi7 is to be used only for handling DAB+, FM channels or music via Bluetooth, no further installation is required.

DabWiFi7 is connected to the system input that is selected by pressing **AMEM** or **ATAPE** on the Bang & Olufsen remote.

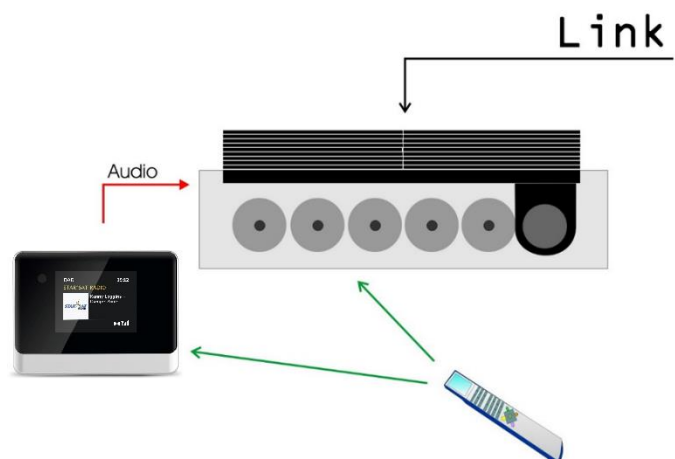

If the Bang & Olufsen system has no **AMEM** or **ATAPE** operated input available, the DabWiFi7 needs to be connected to a different input socket and reprogramming of the DabWiFi7 is required accordingly. **See the Installation Manual.**


- *Bang & Olufsen link-systems do not only allow for listening to system sources from the main room from any connected link room, but also for controlling them remotely. Thus, a link connected kitchen speaker plays music from the main room. DabWiFi7 may be part of that system, controlled via WiFi. See the Installation Manual.*

PRESETS - FAVORITE CHANNELS



Enter favorite channels as presets selectable by pressing single digits on a Bang & Olufsen remote.

A total of 30 presets are available for FM, DAB+ and Internet Radio each. Presets may be changed at any time by pressing a single key on the Bang & Olufsen remote.

INTERNET RADIO CHANNELS



- Press **ATAPE** or **AMEM** To power on DabWiFi7 and the B&O radio. *1
- Press  repeatedly until **Internetradio** is shown in the display.


 


PRESETS

- To select a preset **Internet Radio** channel, simply press a digit **0** – **9** .
- Press  to get to the presets 11 to 30.
- Press  to get a list of the preset channels.





The selected preset number and the quality of the WiFi signal are displayed at the very bottom of the display.

SELECTING A NON-PRESET INTERNET RADIO STATION.

From the play screen, Press  or  to access the Radio Search menu. Here the channels are sorted in subcategories for easier location.


In these listings the  (**BACK**) **must** be used to go back to the previous screen. For ease the  may be used to select an item in the list, but the  **must** be used to back out. Just as  works in all menus.

OTHER CONTROL OPTIONS DURING INTERNET RADIO HANDLING:



-   Save the actual channel as a new preset.
-  **Back** to return to a previous menu.
-  **4** Info

*1 The actual B&O system might be setup to use another source than **ATAPE** or **AMEM** .

DAB+ CHANNELS






- Press **ATAPE** or **AMEM** To power on DabWiFi7 and the B&O radio. *1
- Press  repeatedly until **DAB** is shown in the display.

PRESETS

- To select a preset **DAB+** channel, simply press a digit **0** – **9** .
- Press  to get to the presets 11 to 30.
- Press  to get a list of the preset channels.


The preset number and the quality of the antenna signal are displayed at the very bottom of the display.

OTHER CONTROL OPTIONS DURING DAB HANDLING:



-   Save the actual channel as a preset.
-  **Back** to return to a previous menu.
-  **4** Info
-  **8** Rescan for stations

*1 The actual B&O system might be setup to use another source than **ATAPE** or **AMEM** .

FM CHANNELS






- Press **ATAPE** or **AMEM** To power on DabWiFi7 and the B&O radio. *1
- Press  repeatedly until **FM** is shown in the upper left corner of the display.

PRESETS

- To select a preset **FM** program, simply press a digit **0** – **9** .
- Press  to get to the presets 11 to 30.
- Press  to get a list of the preset channels.

The preset number and the signal quality are displayed at the very bottom of the display.


OTHER CONTROL OPTIONS DURING FM HANDLING:

-   Save the actual channel as a preset.
-  **Back** to return to a previous menu.
-  **4** Info
-  **8** Rescan for stations

*1 The actual B&O system might be setup to use another source than **ATAPE** or **AMEM** .

BLUETOOTH

Selecting the Bluetooth mode makes it possible to play music from any paired smartphone, tablet or other device, via the DabWiFi7 and the Bang & Olufsen system. *1

- Press **ATAPE** or **AMEM** To power on DabWiFi7 and the B&O radio. *2
- Press  repeatedly until **Bluetooth** is shown in the display.

In the Bluetooth mode all control of the music is handled directly on the transmitting smartphone, tablet or any other Bluetooth connected device.

Playback status and the signal quality are displayed at the very bottom of the display.

OTHER CONTROL OPTIONS DURING BLUETOOTH HANDLING:

 **4** Info

*1 PAIRING A BLUETOOTH DEVICE TO DABWIFI7


For a smartphone, tablet or any other bluetooth device to be able to send music to the DabWiFi7, it must be paired with DabWiFi7. Pairing is only needed initially, as DabWiFi7 will remember the bluetooth device.

To pair a bluetooth transmitter with DabWiFi7:

1. Select the bluetooth mode, as described above.
2. Go to the Setup Menu on the transmitting device and look for the bluetooth menu.
3. Shortly after selecting bluetooth, the DabWiFi7 will show up in the menu as **DIGITRADIO 10 IR**. Select this and music played on the device can be listened to via the Bang & Olufsen system.





*2 The actual B&O system might be setup to use another source than **ATAPE** or **AMEM**.

PODCASTS

- Press **ATAPE** or **AMEM** To power on DabWiFi7 and the B&O radio. *1
- Press  repeatedly until **Podcast** is shown in the display.

The selected preset number and the WiFi signal quality are displayed at the very bottom of the display. A Podcast preset is saved in the Internet Radio preset list.

OTHER CONTROL OPTIONS DURING PODCAST HANDLING:

-   Save the actual channel as a preset.
-  **Back** to return to a previous menu.
-  **4** Info

*1 The actual B&O system might be setup to use another source than **ATAPE** or **AMEM** .

SPOTIFY

- Press **ATAPE** or **AMEM** To power on DabWiFi7 and the B&O radio. *1

From the Spotify app, simply select the **DIGITRADIO 10 IR** (Default name of the DabWiFi7) to play Spotify via the DabWiFi7 and the Bang & Olufsen system. DabWiFi7 will automatically shift to Spotify.

Playback status and the quality of the WiFi signal are displayed at the very bottom of the display.

OTHER CONTROL OPTIONS DURING PODCAST HANDLING:

 **4** Info

*1 The actual B&O system might be setup to use another source than **ATAPE** or **AMEM** .

MAIN MENU


MENU gives access to the main menu. When chosen various receiver options are available.


Adjustment in this menu is required only during initial installation.

OLDER BANG & OLUFSEN REMOTES

The DabWiFi7 tuner may be controlled by all Bang & Olufsen system remotes.

Through the years Bang & Olufsen has marketed various models, where keys have been added or removed. Some keys have just changed names.

As an example, the **PLAY** key has been replaced by the  key.

If the remote does **NOT** have a  key or a small joystick, control the DabWiFi7 tuner in accordance with below tables.

DAILY OPERATION WITH OLDER BANG & OLUFSEN REMOTES

PLAY PLAY		Press twice to select. Mouse click.
STOP		Select source DAB+, Internet Radio, Bluetooth etc.
GOTO		Get a list of the preset channels.
STORE		BACK to previous screen.
PLAY	▲	Favorite Recall
PLAY	▼	Favorite Save
PLAY 7		Set Bass and Treble.