

# OneRemote DVB-Combo I

Cable, Satellite & Terrestrial Receiver with Internal STB for Bang & Olufsen TV


















**DVB-C, DVB-T/T2, DVB-S/S2**  
**WEB-TV, IP-TV**

## User Guide




CONTROL WITH BANG & OLUFSEN REMOTE CONTROL.

Daily control with Beo4, Beo5, Beo6, BeoRemote One
















		OK, <i>select</i>
	/	
		page up/ down EPG
		MENU <i>in/ out/ back</i>
		MENU leave
		<i>Green function *1</i>
		<i>Red function *1</i>
		<i>Yellow function *1</i>
		<i>Blue function *1</i>
		<i>WHITE function</i>

Text TV controls













		Text TV
		Text TV <i>end</i>

*\*1 The colored keys have been reprogrammed. Thus, to achieve the original function of each colored key press  prior to pressing the key.*

Recording functions with attached USB device

		Play <i>press 1 sek.</i>
		Play
		Stop
		Pause
	 / 	Rew / FF
	 / 	Previous/ Next
		Record

Other functions

		Favorite list
		F1 Functions
		Folder
		Satellite list
		Program info
		Find

Daily operation with older Bang & Olufsen remotes

This receiver is controlled easiest with a newer B&O type remote control like Beo4 or later, due to the colored keys. See chapter *Using older Bang & Olufsen remotes*.

**CONTENTS**

**CONTROL WITH BANG & OLUFSEN REMOTE CONTROL.....2**

**DVB-COMBO I.....4**

    Favorite list .....1

    Information .....1

    EPG.....1

    Channel list.....2

    Zoom .....2

**ORGANISING SERVICES.....3**

    Editing channel list .....3

    Edit Favoritelist .....4

**TIMER RECORDING.....4**

**MEDIA PLAYER.....5**

    Movie Player .....5

    Music Player .....5

    Picture Player .....6

**APPS.....6**

    YouTube .....6

    RSS reader .....6

    Google Maps .....7

    WEB TV.....7

**GAMES .....7**

    Tetris, Snake, Othello .....7

**USING OLDER BANG & OLUFSEN REMOTES.....7**

## DVB-COMBO I

- This User Guide is about daily use. See the Setup Guide about installation.

Advanced OneRemote circuitry has been added to this receiver, OneRemote DVB-Combo I, enabling it to be part of a remotely controlled Bang & Olufsen system. Complete control is obtained with a Bang & Olufsen remote control terminal.

OneRemote DVB-COMBO I may be connected to any Bang & Olufsen TV with a Scart socket and controlled by Bang & Olufsen remotes. If the Bang & Olufsen TV has a HDMI or DVI socket, a cable can be used to improve the picture quality.







When switching on the DVB-COMBO I with a Bang & Olufsen remote the Bang & Olufsen system is switched on too and the input with the DVB-COMBO I automatically selected.

The modified receiver is named DVB-Combo I.

**The DVB-Combo-I is controllable only when connected to a Bang & Olufsen TV, that sends control data via a Scart Cable connection.**


**DVB-Combo I is therefore only controllable with the TV's Bang & Olufsen remote control.**

## FAVORITE LIST

 Enables the Favorite list  
 Closes the favorite list  
 /  Choose  
 /  Page up/ down



 



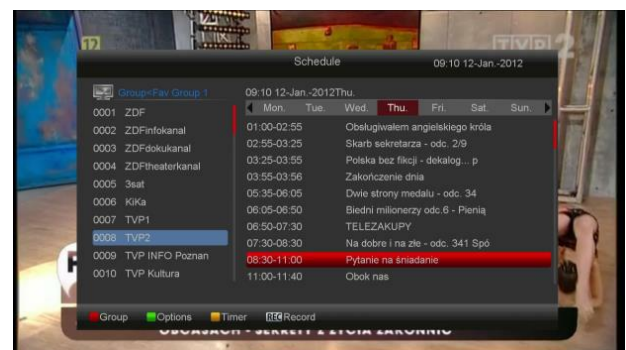 
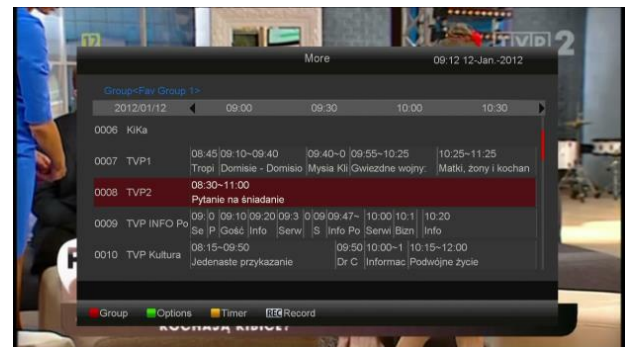 
## INFORMATION

 Enables information















## EPG



   Enables the list  
 Select group  
 Select Now, Next, More or time.  
 Set a recording timer.




## CHANNEL LIST

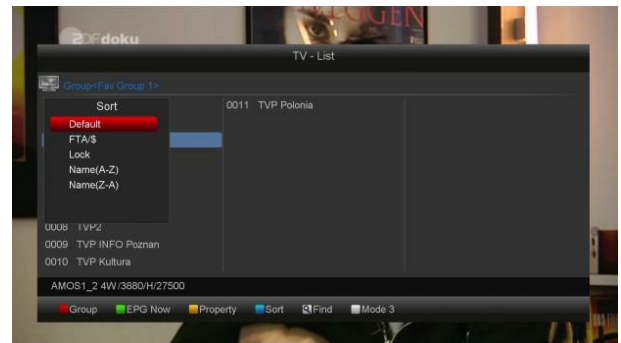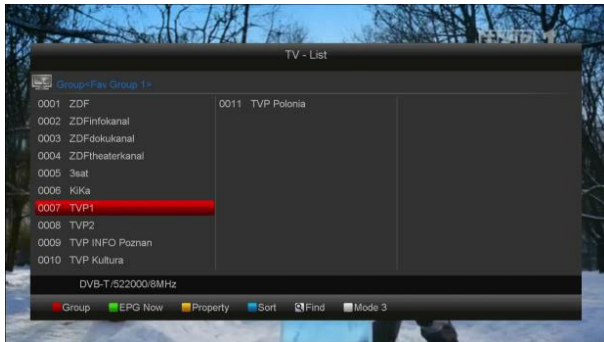

 -   Enables the list
-   Select group
-   EPG now
-   Select as favorite, lock, delete, rename.
-   Sort

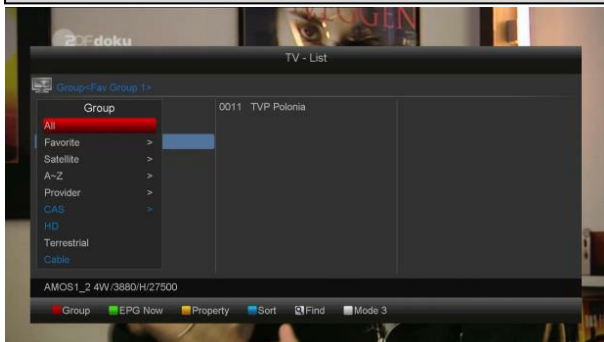

  **Åbner/ lukker menuen**

 
 
 


## ZOOM






-  Zoom x1 .. x16
-  Leave the zoom window.

## ORGANISING SERVICES

Here channel list and favorite lists can be created and edited.

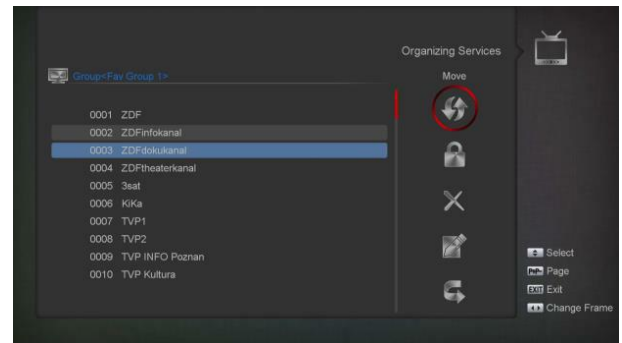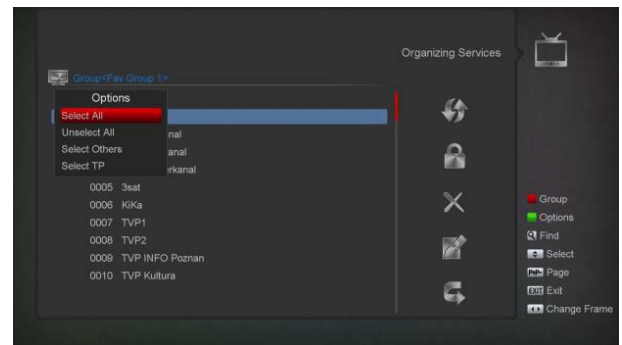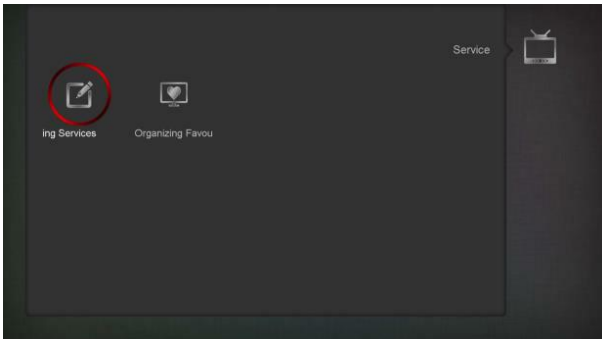

## EDITING CHANNEL LIST

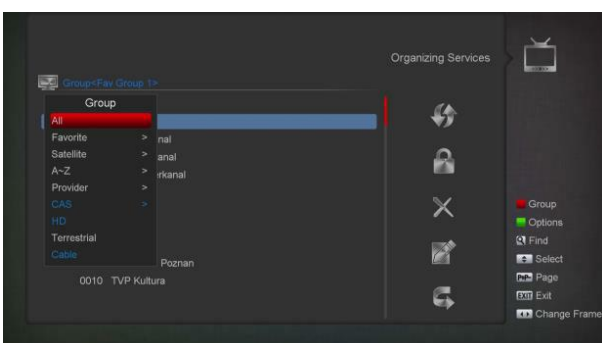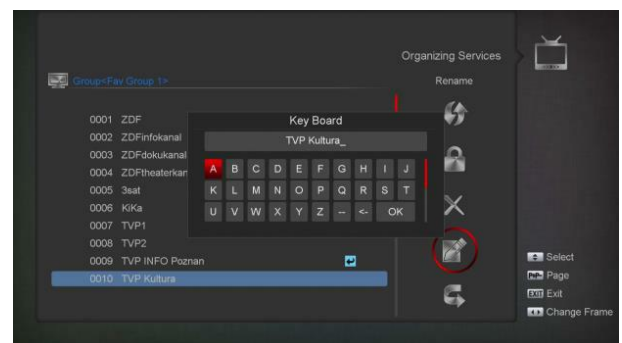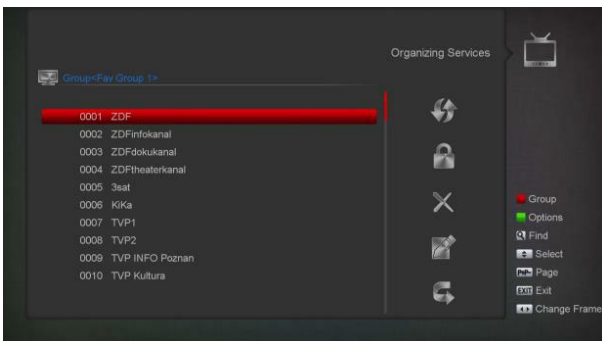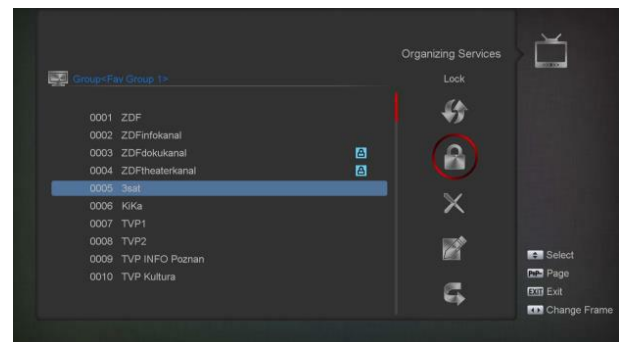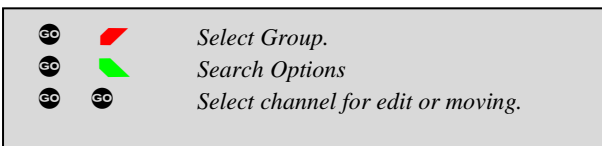     

## EDIT FAVORITELIST

	Select favorite list.
	Options
	Select channel
	Add or remove



 
 
## TIMER RECORDING





## MEDIA PLAYER



This chapter is relevant only if a USB device is attached.

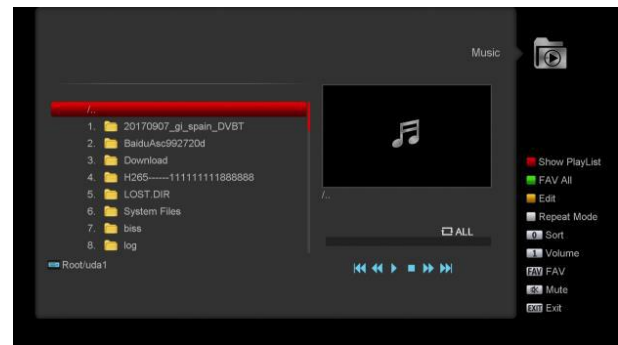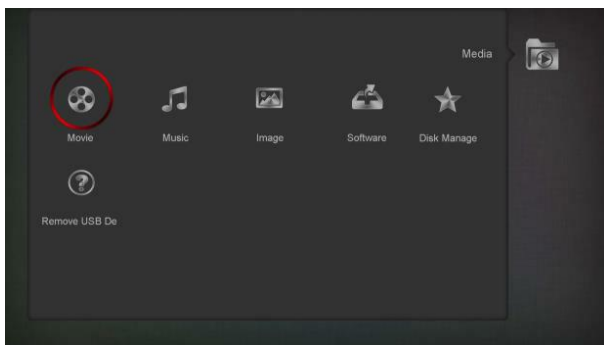


### Playlist menu

- Start playing
- Delete
- Move
- Delete all
  
## MOVIE PLAYER

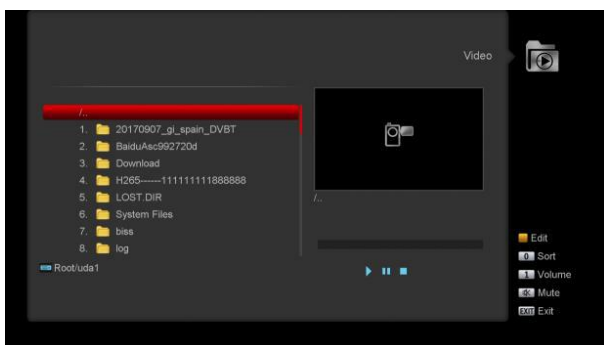

## MUSIC PLAYER


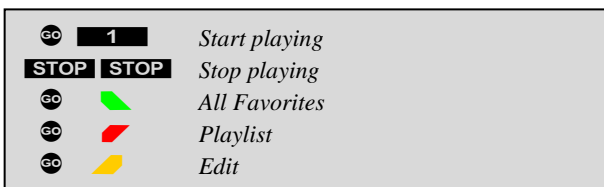 


If more USB device are attached, select with




PICTURE PLAYER

  - Show the picture marked
- Show Favorites
- Show Playlist
- Edit
- Multiview
- Setup

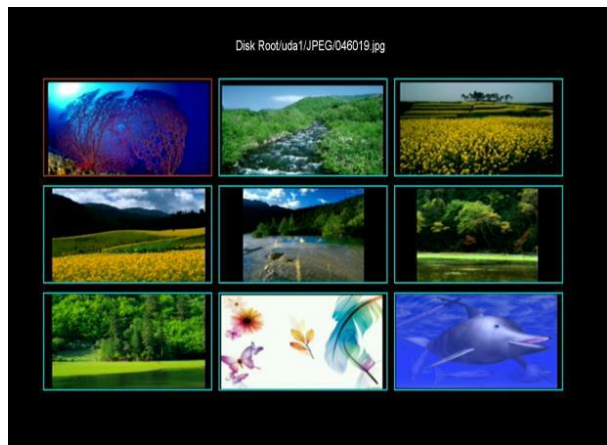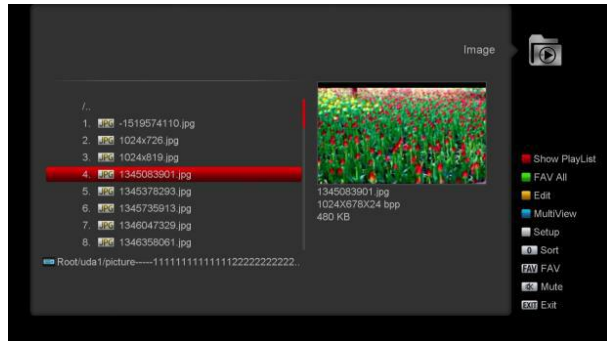


APPS

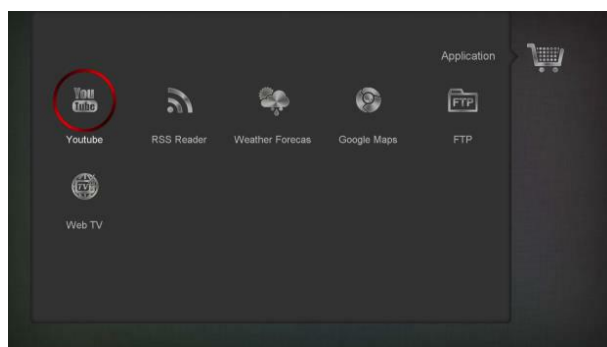 


YOUTUBE

 - Play marked
- Pause
- Stop
- Options
- Featured
- Select Group.
- Go to top of list

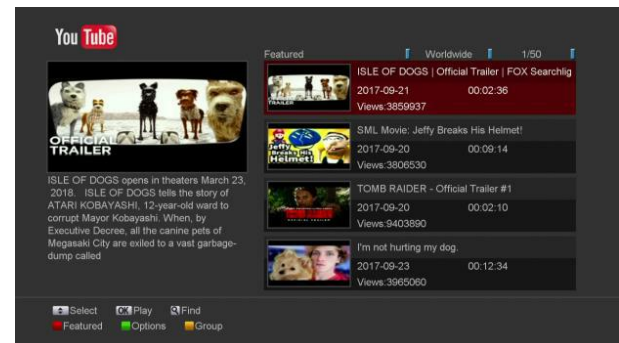


RSS READER

 - Add Channel
- Update Content
- Remove Channel
- Edit Channel
- Load RSS list from USB

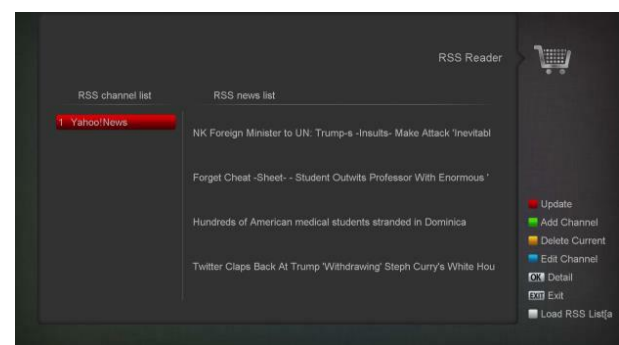


## GOOGLE MAPS

 		Zoom in
		Zoom out
		Move cursor
		Find location

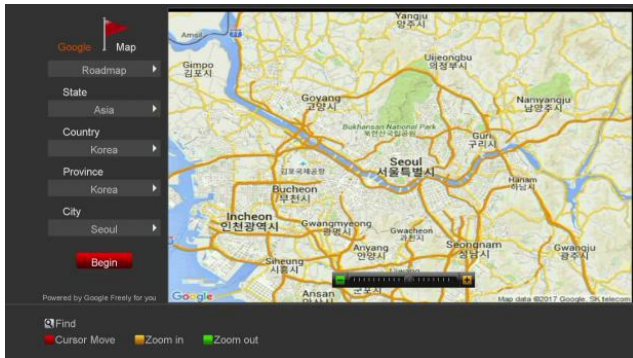


## WEB TV

 		Add Channel
		Remove Channel
		Edit Channel
		Load WEB TV list from USB

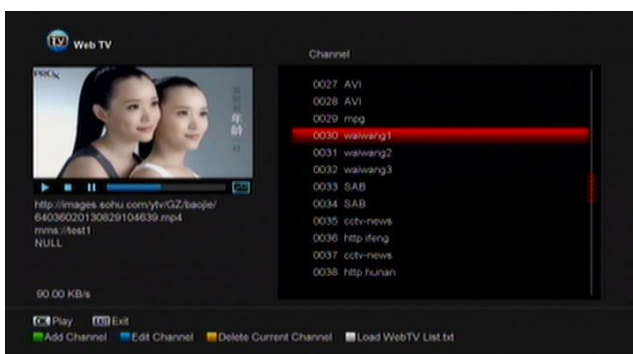

## GAMES

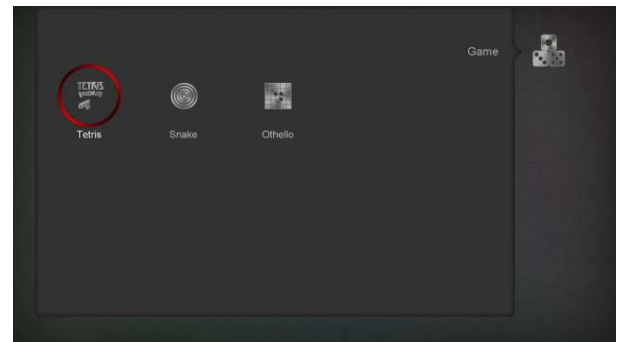 

## TETRIS, SNAKE, OTHELLO

## USING OLDER BANG & OLUFSEN REMOTES

This receiver is controlled easiest with a newer B&O type remote control like Beo4 or later, due to the colored keys.

The receiver can be controlled with older remote controls like Beolink1000.

The colored key-commands may be sent with a Beolink 1000 using two sequence keying, as shown below.

<b>PLAY</b> <b>PLAY</b>	Press twice to select
<b>MENU</b>	Main Menu
<b>GOTO</b>	Return
<b>STORE</b>	Exit
<b>PLAY</b> <b>STORE</b>	Search
<b>SHIFT</b>	BLUE
<b>SHIFT</b>	RED
<b>SHIFT</b>	YELLOW
<b>SHIFT</b>	GREEN