

# OneRemote DVB-Combo II

Cable, Satellite & Terrestrial Receiver with Internal STB for Bang & Olufsen TV

**DVB-C, DVB-T/T2, DVB-S/S2**  
**WEB-TV, IP-TV**

## **User Guide**




CONTROL WITH BANG & OLUFSEN REMOTE CONTROL.

Daily control with Beo4, Beo5, Beo6, BeoRemote One
















		OK, <i>select</i>
	/	
		page up/ down EPG
		MENU <i>in/ out/ back</i>
		MENU leave
		<i>Green function *1</i>
		<i>Red function *1</i>
		<i>Yellow function *1</i>
		<i>Blue function *1</i>
		<i>WHITE function</i>

Text TV controls













		Text TV
		Text TV <i>end</i>

*\*1 The colored keys have been reprogrammed. Thus, to achieve the original function of each colored key press  prior to pressing the key.*

Recording functions with attached USB device

		Play <i>press 1 sek.</i>
		Play
		Stop
		Pause
	 / 	Rew / FF
	 / 	Previous/ Next
		Record

Other functions

		Favorite list
		F1 Functions
		Folder
		Satellite list
		Program info
		Find

Daily operation with older Bang & Olufsen remotes

This receiver is easiest controlled with a newer B&O type remote control like Beo4 or later, due to the colored keys. See chapter *Using older Bang & Olufsen remotes*.

**CONTENTS**

**CONTROL WITH BANG & OLUFSEN REMOTE CONTROL.....2**

**DVB-COMBO II .....4**

- Favorite list .....1
- Information .....1
- EPG .....1
- Channel list.....2
- Zoom .....2

**ORGANIZING SERVICES .....3**

- Editing channel list .....3
- Edit Favorite list .....4

**TIMER RECORDING .....4**

**MEDIA PLAYER .....5**

- Movie player .....5
- Music Player .....5
- Picture Player .....6

**APPS .....6**

- YouTube .....6
- RSS reader .....6
- Google Maps .....7
- WEB TV.....7

**GAMES .....8**

- Tetris .....8
- Snake.....8
- Othello .....8

**USING OLDER BANG & OLUFSEN REMOTES .....9**

## DVB-COMBO II

This User Guide is about the daily use of the receiver. See the Setup Guide about installation.

Advanced OneRemote circuitry has been added to this receiver, OneRemote DVB-Combo II, enabling it to be part of a remotely controlled Bang & Olufsen system. Complete control is obtained with a Bang & Olufsen remote control terminal.

The OneRemote DVB-COMBO II may be connected to any Bang & Olufsen TV with a Scart socket and controlled by Bang & Olufsen remotes. If the Bang & Olufsen TV has a HDMI or DVI socket, a cable can be used to improve the picture quality.







When switching on the DVB-COMBO II with a Bang & Olufsen remote the Bang & Olufsen system is switched on too and the input with the DVB-COMBO II automatically selected.

The modified receiver is named DVB-Combo II.

**The DVB-Combo-II is controllable only when connected to a Bang & Olufsen TV, that sends control data via a Scart Cable connection.**


**DVB-Combo II is therefore only controllable with the TV's Bang & Olufsen remote control.**

## FAVORITE LIST

 Enables the Favorite list  
 Closes the favorite list  
 /  Choose  
 /  Page up/ down



 



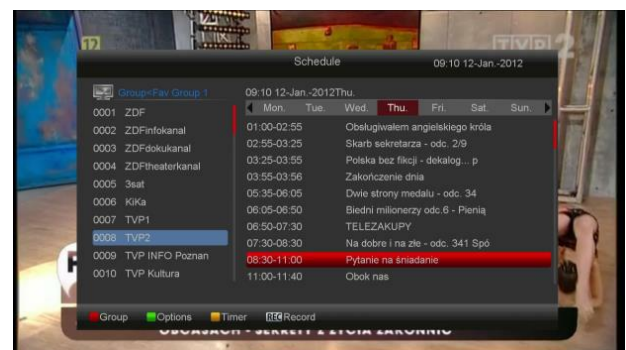 
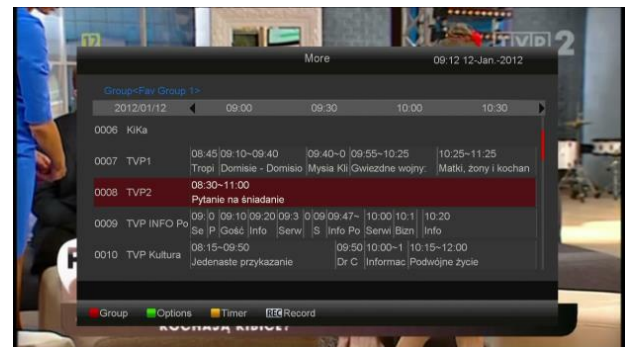 
## INFORMATION

 Enables information















## EPG

   Enables the list  
 Select group  
 Select Now, Next, More or time.  
 Set a recording timer.




## CHANNEL LIST

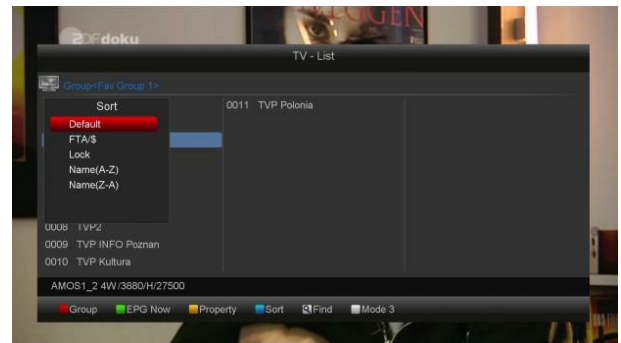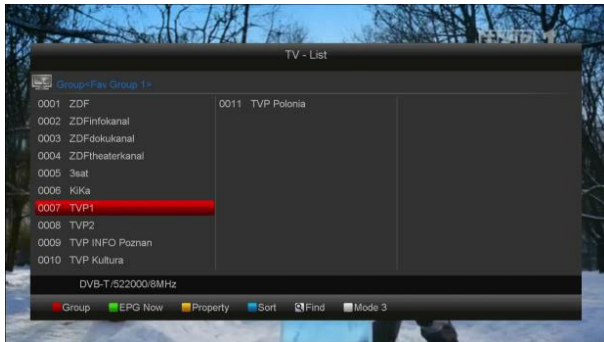

 -   Enables the list
-   Select group
-   EPG now
-   Select as favorite, lock, delete, rename.
-   Sort

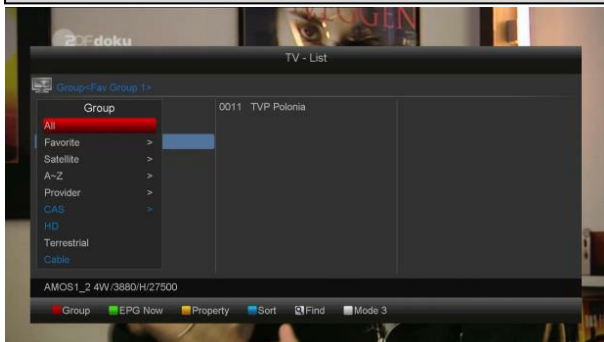

## Åbner/ lukker menuen

 
 
 


## ZOOM






-  Zoom x1 .. x16
-  Leave the zoom window.

## ORGANIZING SERVICES

Here channel lists and favorite lists can be created and edited.

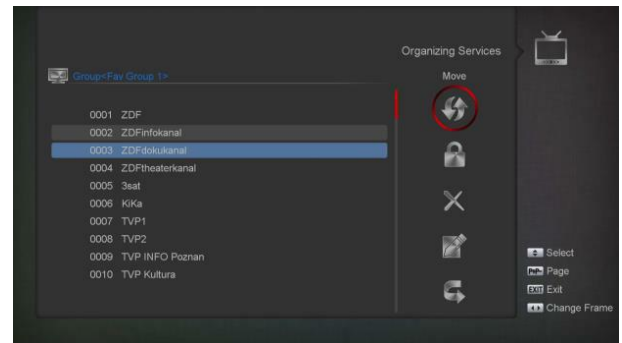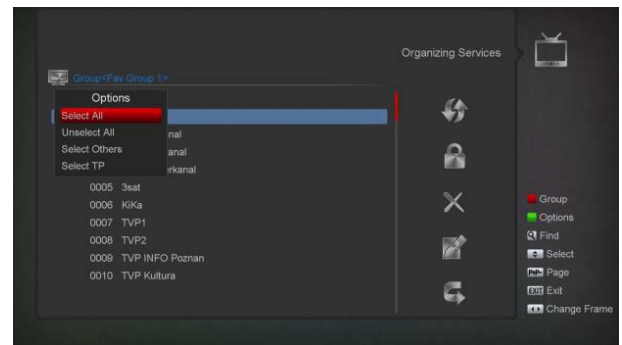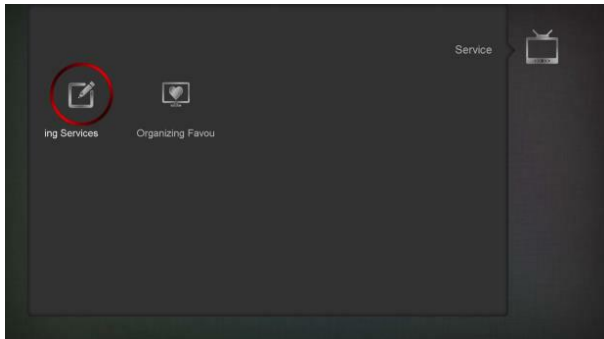

## EDITING CHANNEL LIST

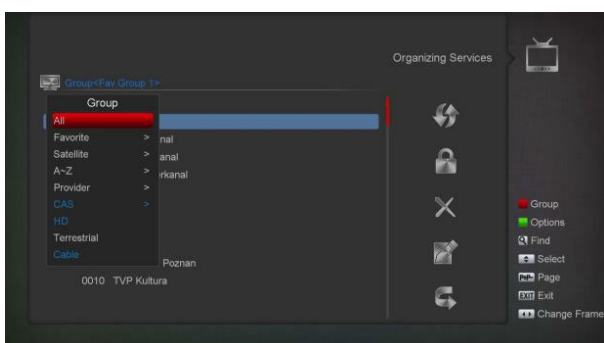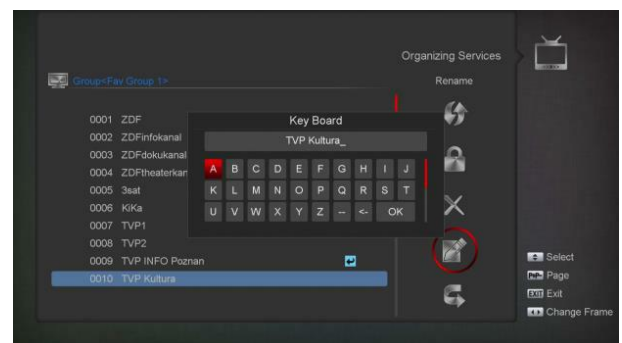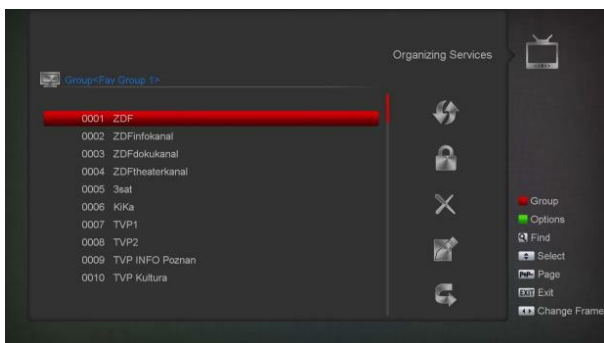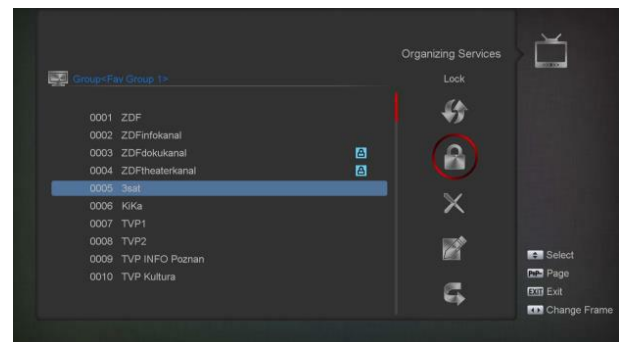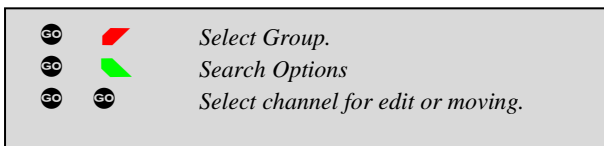     

## EDIT FAVORITE LIST

	Select favorite list.
	Options
	Select channel
	Add or remove



 
 
## TIMER RECORDING





## MEDIA PLAYER



This chapter is relevant only if a USB device is attached.

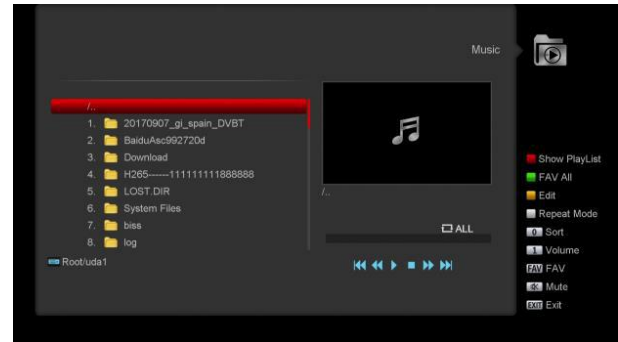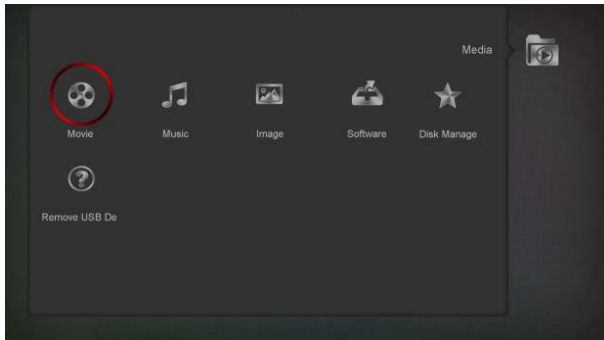


### Playlist menu

- Start playing*
- Delete*
- Move*
- Delete all*
  
## MOVIE PLAYER

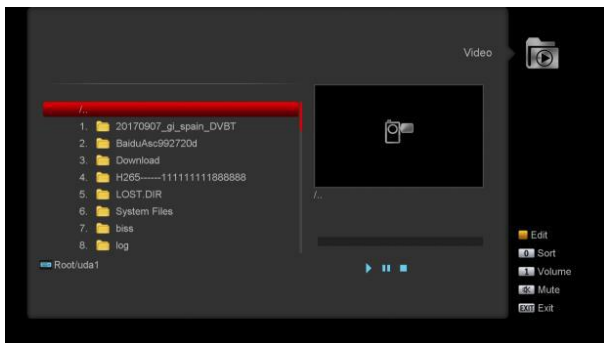

## MUSIC PLAYER


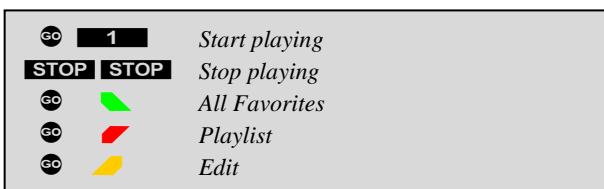 


If more USB device are attached, select with




PICTURE PLAYER

  - Show the picture marked
- Show Favorites
- Show Playlist
- Edit
- Multiview
- Setup

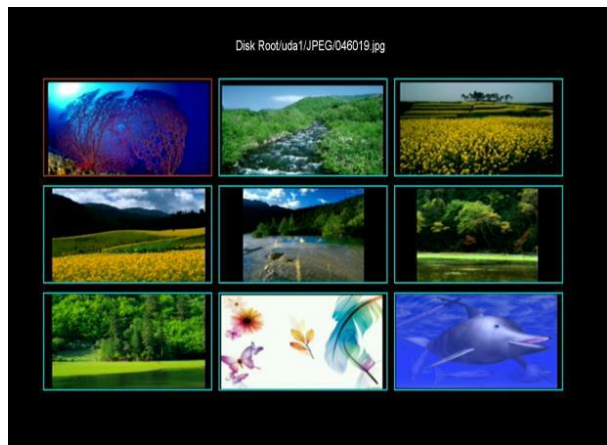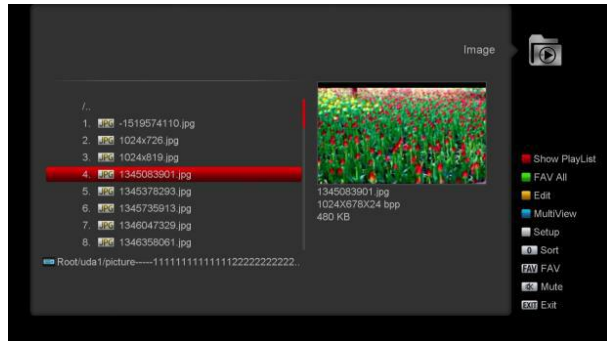


APPS

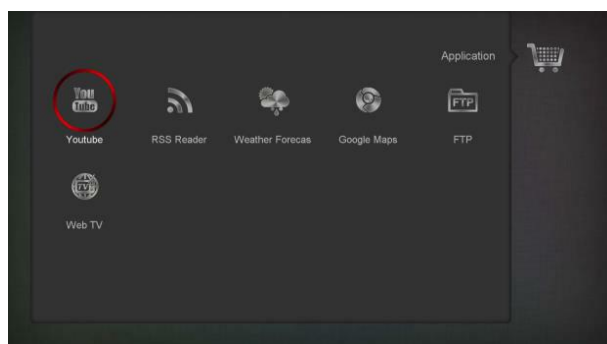 


YOUTUBE

  - Play marked
- Pause
- Stop
- Options
- Featured
- Select Group.
- Go to top of list

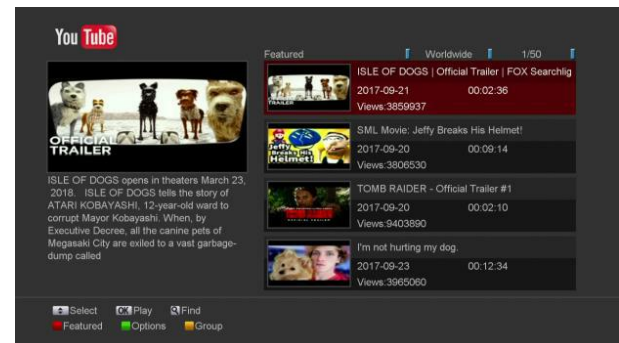





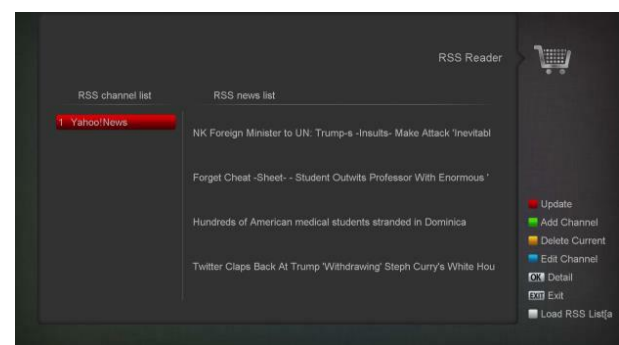




RSS READER

- Add Channel
- Update Content
- Remove Channel
- Edit Channel
- Load RSS list from USB




## GOOGLE MAPS

 		<i>Zoom in</i>
		<i>Zoom out</i>
		<i>Move cursor</i>
		<i>Find location</i>

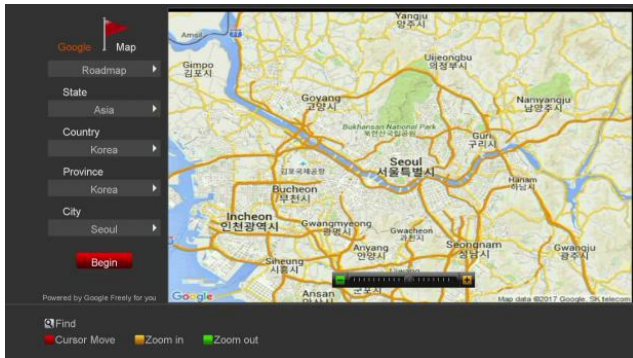


## WEB TV

 		<i>Add Channel</i>
		<i>Remove Channel</i>
		<i>Edit Channel</i>
		<i>Load WEB TV list from USB</i>

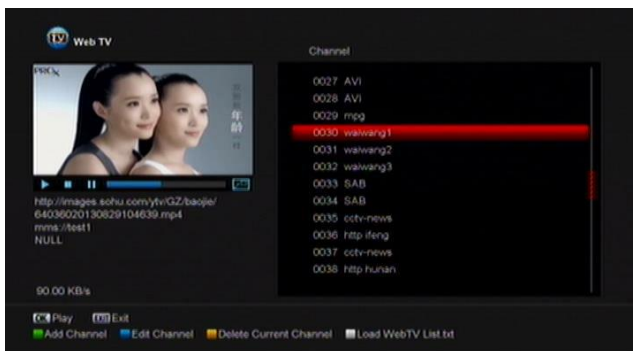

## GAMES

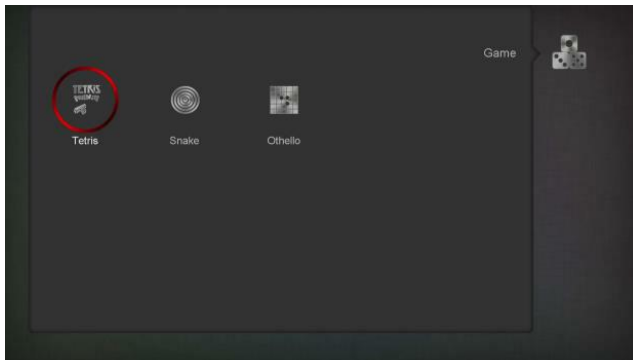 

---

**TETRIS**

---

---

**SNAKE**

---

---

**OTHELLO**

---

## USING OLDER BANG & OLUFSEN REMOTES

This receiver is easiest controlled with a newer B&O type remote control like Beo4 or later, due to the colored keys.

The receiver can be controlled with older remote controls like Beolink1000.

The colored key-commands may be sent with a Beolink 1000 using two sequence keying, as shown below.

<b>PLAY</b> <b>PLAY</b>	Press twice to select
<b>MENU</b>	Main Menu
<b>GOTO</b>	Return
<b>STORE</b>	Exit
<b>PLAY</b> <b>STORE</b>	Search
<b>SHIFT</b> <b>▲</b>	BLUE
<b>SHIFT</b> <b>▼</b>	RED
<b>SHIFT</b> <b>»</b>	YELLOW
<b>SHIFT</b> <b>«</b>	GREEN