

OneRemote Bluetooth receiver

Receiver for a B&O Radio or TV

User manual



Stream music to a Bang & Olufsen radio or TV from:

- Smartphones
- Tablets
- PC
- Other Bluetooth sources

Installation

1. Connect the Bluetooth receiver to a free input socket of the Bang & Olufsen Radio or TV.
2. Go to the Bluetooth menu of the source and connect to the '**Bluetooth Music Receiver**'.
If asked for a PIN code, enter 0000.



Bang & Olufsen Socket types

The Bluetooth receiver may be connected to any Bang & Olufsen Radio or TV, only the right cable must be used between the receiver and the Bang & Olufsen device.

- **DIN connector**
The majority of Bang & Olufsen radios uses DIN connectors for connection of Tape recorders, CD players and other AUX sources. A DIN connector cable is included.
- **RCA connector**
A few Bang & Olufsen radios use RCA connectors for connection of an AUX source. An RCA connector cable is included.
- **Scart connector**
A scart socket may be used as an audio input on a Bang & Olufsen TV. To achieve this an extra Scart adaptor must be used, that is not included.