

Beocompatible operation with  
**Oneremote Interface Type 3046**  
for T-Home X-301

Beo4 and Beolink 1000 are remote control terminals from Bang & Olufsen. Oneremote supplies interface modules that allow third party equipment to be operated via a Bang & Olufsen remote control system.



### Congratulations

With the interface module EXT from [www.oneremote.dk](http://www.oneremote.dk) connected to your receiver and a Bang & Olufsen TV you can operate it with your Bang & Olufsen remote control terminal.

This user guide tells you how.

### Plug and Play

The TV-scart output on the receiver can be connected directly to a vacant link equipped AV socket on the Bang & Olufsen TV with the special EXT scart connection cable.

Connected in this way, the receiver can be used with any Bang & Olufsen TV, serving the TV with RGB signals and audio through the same cable.

Following the correct programming of the AV connection the receiver is ready to operate. For programming of the AV connection check the Bang & Olufsen TV User Manual.

### Bang & Olufsen remote controls

If connected correctly to your Bang & Olufsen TV set, the receiver can be controlled through your TV set with either a Beo4 or Beo5 remote control.

### Operation in a Beolink video system

In a Bang & Olufsen Beolink video system, where the main video- and/or

 
DVD player can be controlled through the connected Bang & Olufsen TV sets, you will get full control from all link rooms.


 
The receiver is connected to a B&O TV set as a V.MEM, V.Tape, DTV, SAT, V.Aux or similar. If the TV set is part of a link system, the receiver is shown and controlled like similar devices from link rooms.

*\*B&O compatible means that the device can be controlled with a Bang & Olufsen remote control when connected to a Bang & Olufsen TV set.*

### Using the B&O remote control

Due to the fact that the Beo4 / Beo5 does not have as many buttons as the receivers own remote, some of the buttons on the Beo4 have more than one function.


To go to the alternative function of a button you must press the  button.









 followed by  on a Beo4/ Beo5 is similar to "info" on the receivers own remote control.

















 







 

 











In the overview to the right, you will see a comparison table for special button combinations.

To achieve optimal control it is necessary to be familiar with the original remote for the receiver. The functions and control sequences of the receivers remote control are found in the receivers user guide.

The receiver is automatically turned on when the desired AV input on the TV set is chosen. This input can be V.MEM, DTV, V.TAPE, DVD, SAT etc.

As the coloured buttons has been reassigned to new direct functions,  has to be pressed first to shift to the coloured X301T function keys:

-   Green function
-   Yellow function
-   Red function
-   Blue function

Beo4/ Beo5	Function
 	OK
	Play - <i>press 1 second</i>
 	EPG
	Return
 	CH+ / CH-
	Info
 	OPT
 	Rewind
 	FF
 	
 	Löschen
 	Bestätigen
 	Meine Aufnahme
 	TXT
 	VOD
 	Menu
 	Rec
 	Power
 	Previous program
	Exit
	Stop
	Record