



**OneRemote INT Converter**

Type 32002659

**User manual**

Beokompatible functions

Technisat DIGIT ISIO S

Technisat DIGIT ISIO S2

Technisat Digicorder HD S3

### Daily use using Beo4, Beo5 or Beo6

|  |             |           |
|--|-------------|-----------|
|  |             | OK        |
|  | *1          | NAV       |
|  | *1          | Zurück    |
|  | *1          | Page up   |
|  | *1          | Page down |
|  | <b>1</b>    | TV-RADIO  |
|  | <b>2</b>    | Option    |
|  | <b>3</b>    | SFI       |
|  | <b>EXIT</b> | WWW       |

*\*1 As the un-shifted function of the coloured function buttons has been assigned to other functions, they have to be preceded with a to retrieve their actual coloured functions.*

|  |  |                       |
|--|--|-----------------------|
|  |  | Green function        |
|  |  | Yellow function       |
|  |  | Red function          |
|  |  | Blue function (Timer) |

### Operating using Beolink1000

The OneRemote converter is best operated using a remote control with coloured buttons like the Beo4, but can also be operated with a Beolink1000.

The **PLAY** key on the old Beolink1000 remote control from Bang & Olufsen, has the same function as the key on newer remote controls. Thus all operations in the table above is doable using a Beolink1000 remote control. Simply replace the in the table with a **PLAY**.

The Beolink1000 remote control is equipped with a few buttons not available on newer models, and the coloured keys has to be entered using a two-key sequence.

### Playback and recording

|             |             |                          |
|-------------|-------------|--------------------------|
|             |             | Play <i>press 1 sec.</i> |
|             | <b>0</b>    | Play <i>alternative</i>  |
| <b>STOP</b> | <b>STOP</b> | Stop                     |
|             | <b>STOP</b> | Still                    |
|             | ◀ / ▶       | Rew/ FF                  |
|             | <b>6</b>    | Timer                    |
|             | <b>8</b>    | Record                   |

### Other operations

|             |          |                        |
|-------------|----------|------------------------|
|             | <b>4</b> | Text local             |
|             | <b>5</b> | Menu <i>alternativ</i> |
|             | <b>7</b> | info                   |
| <b>MENU</b> |          | Menu                   |
| <b>EXIT</b> |          | Exit                   |

### Special operations

|             |          |              |
|-------------|----------|--------------|
|             | ▲ / ▼    | P+/ P-       |
| <b>STOP</b> | <b>1</b> | PIP          |
| <b>STOP</b> | <b>2</b> | Zoom         |
| <b>STOP</b> | <b>3</b> | HDMI         |
|             | <b>9</b> | Power manuel |

### Special Beolink1000 operations

|              |              |        |
|--------------|--------------|--------|
| <b>GOTO</b>  |              | NAV    |
| <b>STORE</b> |              | Zurück |
| <b>PLAY</b>  | <b>GOTO</b>  | SFI    |
| <b>PLAY</b>  | <b>STORE</b> | WWW    |
| <b>SHIFT</b> | ◀            | Green  |
| <b>SHIFT</b> | ▶            | Yellow |
| <b>SHIFT</b> | ▲            | Blue   |
| <b>SHIFT</b> | ▼            | Red    |

**List of Contents**

|   |      |   |
|---|------|---|
| Translation table .....                   | page | 1 |
| List of contents .....                    | page | 2 |
| Getting started .....                     | page | 3 |
| INT converter – how it works .....        | page | 3 |
| OneRemote operation in a B&O system ..... | page | 4 |
| Option programming. ....                  | page | 5 |

## Getting Started

---

This receiver has been modified for operation in a Bang & Olufsen remote control system allowing full control with a Bang & Olufsen remote control terminal either directly or via connection to Bang & Olufsen equipment. Thus the tuner is Beolink compatible.

### INT internal converter -how it works

---

A OneRemote INT converter is a small microcomputer, which is specifically made to be built in to a non Bang & Olufsen device, equipped with a Scart output socket. This could be a Satellite receiver, DVD player etc.

A Bang & Olufsen TV receives IR data from its remote control, a Beolink1000, Beo4, Beo5 or another.

When a Scart source is selected on the B&O TV, where a device with an INT controller is connected, the TV echoes control data from the remote control to the device. These data is retransmitted via this Scart connection to the device. Control data flows through the existing Scart cable, therefore no further cables is needed.

With a OneRemote OneWay or TwoWay cable, the device can be placed up to 25 metres away from the TV. It could be placed in another room, under a sofa or where ever it suits, as operation is handled via the Scartcable.

If both the TV and the device are equipped with a HDMI connection, a HDMI cable can be added to improve picture and sound quality.

The microcomputer then translates the B&O control data, to data that controls the specific device that it is built into.

If the Bang & Olufsen TV that the device is connected to is the main TV of a Beolink system, all link rooms can get to the device and even operate it.

---

**If both the Bang & Olufsen TV and the receiver are equipped with a DVI or HDMI connection, these can be used for best picture and sound.  
Scart connection is then only used for control and maybe sound.**

---


## OneRemote operation in a B&O system

---

To be able to operate the device correctly with the Beo4 the user has to be familiar with operations with the original remote control as described in the device's user manual.


The beo4 remote control is not equipped with many keys, so we have designed a 'layout' that works logically, even when shifting between different devices. To get a universal layout for different devices, we needed to redefine a few of the beo4 buttons to other functions:

- **Coloured buttons.**

To make room for important functions, we have moved the coloured buttons, to a lower layer. To send a 'red' button command  must be pressed before the red button. The same goes with the other 3 coloured buttons. This way we have freed the direct function of the coloured buttons, to important operations.

In a OneRemote environment the red button is used as Back, Backup or return. The green button is used as EPG, Guide or similar. Finally the blue and yellow button is used for programme stepping.

- **Go or Stop shifted operation.**

Some of the buttons has been assigned 2 or more functions. To get to these they have to be preceded with  or **STOP**.

Buttons that has been assigned secondary functions on this controller can be seen in the operating table on page 1.

## Option programming

---

The OneRemote converter inside your receiver can be programmed with different options, to fit different setup and needs.

An option programming is done by pressing a series of buttons in a special scheme that does not occur during daily use. A programming must be ended within 3 seconds.

To abort an ongoing programming sequence, press any other button than **STOP** or the numeric buttons **0** to **9**.

### Option 7x – auto power off enable.

In some cases it is not wanted that the device automatically powers off, when the TV is powered off. Use this option to enable or disable this.

**STOP STOP STOP STOP STOP STOP 7 1**     *Device powers off with TV.*

**STOP STOP STOP STOP STOP STOP 7 0**     *Device never powers off.*

### Option 8x – menu button block enable.

Some B&O TVs not only echoes the MENU button from the remote control to the device attached to the Scart socket, instead it opens the TV's own ON-screen menu. Use this option to avoid that the device acts on this command, if your setup has this conflict.

**STOP STOP STOP STOP STOP STOP 8 1**     *Use the MENU button.*

**STOP STOP STOP STOP STOP STOP 8 0**     *Ignore the Menu button..*