

Setup Manual

Converter installed in a Beo4



OneRemote RMB4 Converter for Beo4

Type 35104453

controls

Panasonic TV All TV Models



Content

INITIAL INSTALLATION..... 2

Options – Optimizing the installation.....2

Options - Acknowledge.....2

INTEGRATION WITH A BANG & OLUFSEN RADIO. VOLUME CONTROL..... 3

DISABLING THE ONEREMOTE CONVERSION..... 4

FACTORY RESETTING THE ONEREMOTE CONTROLLER OPTIONS 4

SOURCE KEY - SAT/ DTV 5

SOURCE KEY - DVD 6

SOURCE KEY - VAUX..... 7

SOURCE KEY - APPLE TV CONTROL 8

SOURCE KEY - RADIO SOURCE 8

Initial Installation

With a OneRemote RMB4 converter installed in your Bang & Olufsen Beo4 remote control terminal you may also control a PANASONIC TV with that terminal. You may still operate Bang & Olufsen devices.

The RMB4 Factory setting will fit most users, making it possible to fully control a PANASONIC TV as with its original PANASONIC remote control.

This manual covers special installations where further integration is needed. Maybe setups including other Bang & Olufsen devices or even.

To alter the behaviour of the way the OneRemote modified Remote Control operates, one or more so called Options must be entered.

Options – Optimizing the installation

An option is set simply by entering the key sequences shown in the tables. At any time, simply enter the 7-key sequence in the modified Beo4 remote control. The function will immediately take effect.

Some Options may require entering two separate Options. An example could be when control of both a connected Set Top Box i.e. an Apple TV and the PANASONIC TV is needed. Here the RMB4 converter needs to have two Options set:

1. Which Source key on Beo4 is used to activate control of the set top box i.e. **DVD**
2. Which Socket on the TV must be opened, when pressing this Source key i.e. HDMI3.

Any Option can be altered at any time. An Option is available to reset all Options to factory default settings.

Options - Acknowledge

Entering an option is straight forward, but if an acknowledge is needed, it can be achieved setting the PANASONIC TV in TV mode, before entering the Option.


After entering an Option, the RMB4 converter will send a status to the TV, making it change Channel.

TV receives a '0': An error has occurred; the Option has not been recognized or saved properly.
TV receives a '1': An Option has been saved correctly.
TV receives a '3': The OneRemote RMB4 converter has been factory reset.

Integration with a Bang & Olufsen Radio. Volume Control.

If a Bang & Olufsen radio is present in the same room as the non-Bang & Olufsen TV, better TV sound can be achieved by passing the sound signal through the radio to its connected speakers.

To do this, simply connect “analog out” from the TV to the **AAUX** input on the B&O radio. Then set the AAUX option from the table below.

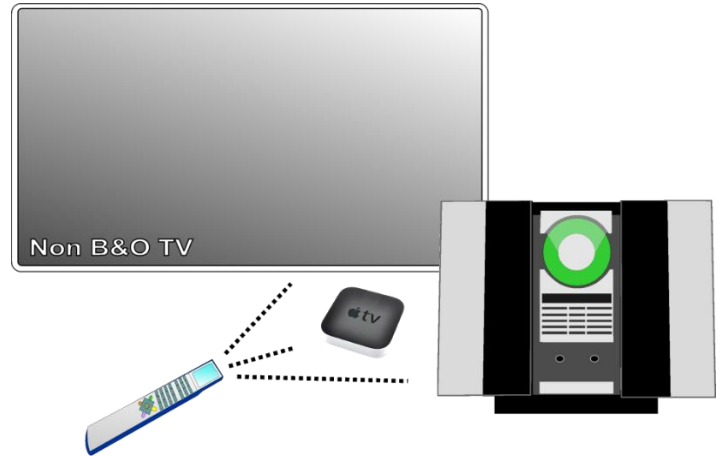

Pressing **TV** will hereafter power on both the non-Bang & Olufsen TV and the Bang & Olufsen radio. All controls will hereafter be sent to the non-Bang & Olufsen TV, only Volume and Mute controls will be sent to the Bang & Olufsen radio.

Volume controls, fully ignored.

LIGHT	MENU	STOP	0	0	0	0
-------	------	------	---	---	---	---

Volume controls, control the TV. *Factory*

LIGHT	MENU	STOP	0	0	1	0
-------	------	------	---	---	---	---

Volume controls, control a B&O radio. *1

LIGHT	MENU	STOP	0	0	2	0
-------	------	------	---	---	---	---

Volume controls, control a B&O TV. *2

LIGHT	MENU	STOP	0	0	3	0
-------	------	------	---	---	---	---

*1 When **TV** is pressed the Beo4 powers on the TV. At the same time the Beo4 sends an **AAUX** command to a Bang & Olufsen audio master. Until another source is selected, volume controls will be directed to the B&O audio master.

*2 When **TV** is pressed the Beo4 powers on the TV. At the same the Beo4 sends a **PC** command to a Bang & Olufsen system. Until another source is selected, volume commands will be directed to the B&O system. Via a BeoLink Active the sound may be moved from the TV to B&O PowerLink speakers.

Disabling the OneRemote Conversion

If the modified Beo4 remote control is to be used with Bang & Olufsen devices only, the converter can be disabled. Simply enter the 7-key sequence shown in the table below.

Disable the OneRemote converter	LIGHT	MENU	STOP	0	0	0	2
Enable the OneRemote converter. <i>Factory</i>	LIGHT	MENU	STOP	0	0	1	2

When the OneRemote converter is disabled, the Beo4 remote control will operate as if no converter had been installed.

Factory resetting the OneRemote controller options

To reset the OneRemote converter to the factory options described in this manual, enter this option:

Enable the OneRemote converter. <i>Factory</i>	LIGHT	MENU	STOP	2	5	5	▲
--	--------------	-------------	-------------	----------	----------	----------	----------

Source Key - SAT/ DTV

Factory setting makes the Beo4 source key **SAT** / **DTV** send a **Home** command to the Panasonic TV. This is used to access the Home menu, primarily used with Smart TV models. Not all PANASONIC TV models make use of this function, thus the key might not make any control.

The **SAT** / **DTV** key can be programmed for other uses, simply by entering the corresponding 7-key sequences from below table.

DTV opens no source	LIGHT MENU STOP 0 0 0 DTV
DTV opens HDMI1	LIGHT MENU STOP 0 0 1 DTV
DTV opens HDMI2	LIGHT MENU STOP 0 0 2 DTV
DTV opens HDMI3	LIGHT MENU STOP 0 0 3 DTV
DTV opens AV1	LIGHT MENU STOP 0 0 4 DTV
DTV opens AV2	LIGHT MENU STOP 0 0 5 DTV
DTV opens AV3	LIGHT MENU STOP 0 0 6 DTV
DTV opens AV4	LIGHT MENU STOP 0 0 7 DTV
DTV opens PC	LIGHT MENU STOP 0 0 8 DTV
DTV sends Home command <i>factory</i>	LIGHT MENU STOP 0 0 9 DTV
DTV opens TV Source menu	LIGHT MENU STOP 0 1 0 DTV
DTV sends Netflix	LIGHT MENU STOP 0 1 1 DTV
DTV sends APPS	LIGHT MENU STOP 0 1 2 DTV

Note that not all options are available on all PANASONIC TV models.

Source Key - DVD

Factory setting makes the Beo4 source key **DVD** send a **Netflix** command to the PANASONIC TV. This is used to directly access the Netflix streaming service. This control is only available on newer Smart TV models. Not all PANASONIC TV models make use of this function, thus the key might not make any control.

The **DVD** key can be programmed for other uses, simply by entering the corresponding 7-key sequences from the table below.

DVD	opens no source	LIGHT	MENU	STOP	0	0	0	DVD
DVD	opens HDMI1	LIGHT	MENU	STOP	0	0	1	DVD
DVD	opens HDMI2	LIGHT	MENU	STOP	0	0	2	DVD
DVD	opens HDMI3	LIGHT	MENU	STOP	0	0	3	DVD
DVD	opens AV1	LIGHT	MENU	STOP	0	0	4	DVD
DVD	opens AV2	LIGHT	MENU	STOP	0	0	5	DVD
DVD	opens AV3	LIGHT	MENU	STOP	0	0	6	DVD
DVD	opens AV4	LIGHT	MENU	STOP	0	0	7	DVD
DVD	opens PC	LIGHT	MENU	STOP	0	0	8	DVD
DVD	sends Home command	LIGHT	MENU	STOP	0	0	9	DVD
DVD	opens TV Source menu	LIGHT	MENU	STOP	0	1	0	DVD
DVD	send Netflix <i>factory</i>	LIGHT	MENU	STOP	0	1	1	DVD
DVD	send APPS	LIGHT	MENU	STOP	0	1	2	DVD

Note that not all options are available on all PANASONIC TV models.

Source Key - VAUX

Factory setting makes the Beo4 source key **VAUX** select the HDMI3 input on the PANASONIC TV. Also, it enables the AppleTV control. See the section about Apple TV.

The **VAUX** key can be programmed for other uses, simply by entering the corresponding 7-key sequences from the table below.

VAUX opens no source	LIGHT MENU STOP 0 0 0 VAUX
VAUX opens HDMI1	LIGHT MENU STOP 0 0 1 VAUX
VAUX opens HDMI2	LIGHT MENU STOP 0 0 2 VAUX
VAUX opens HDMI3 <i>factory</i>	LIGHT MENU STOP 0 0 3 VAUX
VAUX opens AV1	LIGHT MENU STOP 0 0 4 VAUX
VAUX opens AV2	LIGHT MENU STOP 0 0 5 VAUX
VAUX opens AV3	LIGHT MENU STOP 0 0 6 VAUX
VAUX opens AV4	LIGHT MENU STOP 0 0 7 VAUX
VAUX opens PC	LIGHT MENU STOP 0 0 8 VAUX
VAUX sends Home command	LIGHT MENU STOP 0 0 9 VAUX
VAUX opens TV Source menu	LIGHT MENU STOP 0 1 0 VAUX
VAUX send Netflix	LIGHT MENU STOP 0 1 1 VAUX
VAUX send APPS	LIGHT MENU STOP 0 1 2 VAUX

Note that not all options are available on all PANASONIC TV models.

Source Key - Apple TV Control

Factory setting makes the Beo4 **VAUX** source key select the HDMI3 input on the PANASONIC TV. Hereafter it changes control to an Apple TV receiver. An Apple TV connected to HDMI can then be controlled directly.


- If another source key is preferred, enter the 7-key sequence from the table below.
- If another input socket is preferred, change the appropriate Source Selection Option as shown above.

DTV	Enables Apple TV control.	LIGHT	MENU	STOP	0	0	2	5
DVD	Enables Apple TV control.	LIGHT	MENU	STOP	0	0	3	5
VAUX	Enables Apple TV control. <i>Factory</i>	LIGHT	MENU	STOP	0	0	5	5

Source Key - Radio Source

This extra option is not for use with a non-Bang & Olufsen TV, but exclusively for use with a Bang & Olufsen radio. Pressing **RADIO** on Beo4 will normally power on a Bang & Olufsen radio and select its **internal** radio receiver.

The Radio Source option is used to select a **different** source on the Bang & Olufsen radio, when **RADIO** is pressed. When a OneRemote Internet- or DAB radio receiver is connected to the Bang & Olufsen radio, it can then be selected and controlled as a **RADIO** source, though connected to the Bang & Olufsen radio's AAUX socket.

 **RADIO** will **ALWAYS** select the B&O radio's **internal** radio, no matter what option has been selected.

RADIO	sends RADIO to a B&O Radio <i>Factory</i>	LIGHT	MENU	STOP	0	0	1	RADIO
RADIO	sends AAUX to a B&O Radio	LIGHT	MENU	STOP	0	0	2	RADIO
RADIO	sends ATAPE to a B&O Radio	LIGHT	MENU	STOP	0	0	3	RADIO
RADIO	sends ATAPE2 to a B&O Radio	LIGHT	MENU	STOP	0	0	4	RADIO
RADIO	sends PHONO to a B&O Radio	LIGHT	MENU	STOP	0	0	5	RADIO