

User Manual

Converter installed in a Beo4



OneRemote RMB4 Converter for Beo4

Type 35104453

controls


PANASONIC TV All TV Models



Contents

BEO4 - PANASONIC TV EVERYDAY CONTROL TABLE	3
BEO4 - PANASONIC TV EVERYDAY CONTROL TABLE - BEO4 NAVI.....	4
PLAYBACK CONTROL TABLES	5
APPLE TV CONTROL TABLES.....	5
CONTROL TABLES PANASONIC TV – SPECIAL CONTROLS	6
TEMPORARILY DISABLING THE ONEREMOTE TV CONVERSION	6

Beo4 - PANASONIC TV Everyday Control Table

 
TV control tables – when  is the center key of the Beo4 *1



PANASONIC TV Everyday Controls	
TV	TV power on
	TV power off
VMEM / VTAPE	Source select menu
SAT / DTV	Source: <i>Home</i> *2
DVD	Source: <i>Netflix</i> *2
VAUX	Source: <i>AppleTV</i> *3
	Select
/	Program +/-
	Guide
	Back
EXIT	Exit
MENU	Settings
	Green function
	Red function
	Yellow function
	Blue function
/	Use arrows for screen manoeuvring.
/	

PANASONIC TV Text TV Controls	
TEXT	Text TV
TEXT	Text options

*1 Center key

If the center key on the Beo4 is a joystick  refer to the "Navi" control table on the opposite page.


*2 Source select

These source keys, factory preset to select SmartTV sources, may be programmed for another use, i.e. if the PANASONIC TV model does not support the feature refer to the setup guide.
















*3 Apple TV


This source key, factory preset to open the HDMI3 source and then change control to an AppleTV receiver, may be programmed for another use. See the Apple TV page and the setup guide.

Beo4 - PANASONIC TV Everyday Control Table - **Beo4 Navi**


TV control tables - when the center key of the Beo4  is a joystick *1



PANASONIC TV Everyday Controls	
TV	TV power on 2 second
	TV power off
VMEM	Source select menu
DTV	Source: <i>Home</i> *2
DVD	Source: <i>Netflix</i> *2
VAUX	Source: <i>AppleTV</i> *3
 	Select
 / 	Program +/-
	Guide
	Options
BACK	Back -short press
BACK	EXIT -long press
MENU	Settings
   	Move the stick for on screen manoeuvring.
	Green function
	Red function
	Yellow function
	Blue function

PANASONIC TV Text TV Controls	
TEXT	Text TV on/ mix
 TEXT	Text options

***1 Center key**

If center key on the Beo4 is a  refer to the "Go" control table on the opposite page.

***2 Source select**

These source keys, preset to select SmartTV sources, may be programmed for another use. Refer to the setup guide.

***3 Apple TV**

This source key, preset to open the HDMI3 source and then change control to an AppleTV receiver, may be programmed for another use. See the Apple TV page and the setup guide.

Playback Control Tables

If a USB drive is connected to the PANASONIC TV, playback is controlled as shown in the tables below. These controls are also applied for playback using the SmartTV APPS.




PANASONIC TV Playback Controls		
		Play, long press
		Stop
		Pause
		Record
		Rewind
		FF








PANASONIC TV Playback Controls Beo4 Navi		
		Play
		Stop
		Pause
		Record
		Rewind
		FF








Apple TV Control Tables

In the *factory default setting* the OneRemote converter can control an AppleTV after pressing **DVD**. First the PANASONIC TV will open the TV's HDMI3 source and hereafter the Beo4 remote control will shift to direct control of the Apple TV, according to the tables below.

During setup source and control may have been altered. Refer to the Setup Guide.











AppleTV Power Power	
	Power on
	Power on, short press
	Power off, long press










 
AppleTV Control		
	Menu	
	Play/ pause	
	Enter	
		Use arrow keys for screen manoeuvring.
		

AppleTV Control – Beo4 Navi		
	Menu	
	Play/ pause	
	Enter	
		Move the stick for on screen manoeuvring.
		

Control Tables PANASONIC TV – Special Controls

In addition to the controls in the “Everyday Control Tables” some special controls are available. These are shown in below tables.

PANASONIC TV Special Controls		
	EXIT	Surround
	MENU	Apps
	1	Lastview
	2	Vieara Tools
	3	Option
	4	Info
	5	Mediaplayer
	6	Viera link
	7	Viera Cast
	9	3D

PANASONIC TV Special Controls – Beo4 Navi		
	EXIT	Surround
	MENU	Apps
	1	Lastview
	2	Viera Tools
	3	Option
	4	Info
	5	Mediaplayer
	6	Viera link
	7	Viera cast
	9	3D

Temporarily disabling the OneRemote TV Conversion

A OneRemote modified Beo4 remote control controls non-Bang & Olufsen devices, in this case a PANASONIC TV. But it is possible quickly to disable/ enable conversion, thus being able to control both a non-Bang & Olufsen PANASONIC TV and alternatively a Bang & Olufsen TV.

Simply, at any time, enter the two-key sequences from below table.

TV	Controls a Bang & Olufsen TV:	Volume down followed by 0
TV	Controls a PANASONIC TV <i>factory default</i> :	Volume down followed by 1