

# User Manual

Converter installed in a Beo4

## OneRemote RMB4 Converter for Beo4

Type 35104454

controls

### LG TV All TV Models





## Contents

BEO4 - LG TV EVERYDAY CONTROL TABLE.....	3
BEO4 - LG TV EVERYDAY CONTROL TABLE - BEO4 NAVI.....	4
PLAYBACK CONTROL TABLES .....	5
APPLE TV CONTROL TABLES.....	5
CONTROL TABLES – SPECIAL CONTROLS.....	6
TEMPORARILY DISABLING THE ONEREMOTE TV CONVERSION .....	6

## Beo4 - LG TV Everyday Control Table

**TV control tables – when  is the center key of the Beo4 \*1**



<b>LG TV Everyday Controls</b>	
<b>TV</b>	LG TV power on
	LG TV power off
<b>VMEM / VTAPE</b>	Source select menu
<b>SAT / DTV</b>	Source: <i>Home</i> *2
<b>DVD</b>	Source: <i>Netflix</i> *2
<b>VAUX</b>	Source: <i>AppleTV</i> *3
 / 	Select
 / 	Program +/-
	Guide
	Back
<b>EXIT</b>	Exit
<b>MENU</b>	Settings
 / 	<i>Green function</i>
 / 	<i>Red function</i>
 / 	<i>Yellow function</i>
 / 	<i>Blue function</i>
 / 	Use arrows for screen manoeuvring.
 / 	

<b>LG TV Text TV Controls</b>	
<b>TEXT</b>	Text TV
 / <b>TEXT</b>	Text options

**\*1 Center key**

If the center key on the Beo4 is a joystick  refer to the "Navi" control table on the opposite page.

**\*2 Source select**

These source keys, factory preset to select SmartTV sources, may be programmed for another use, i.e. if the LG TV model does not support the feature refer to the setup guide.

**\*3 Apple TV**

This source key, factory preset to open the HDMI3 source and then change control to an AppleTV receiver, may be programmed for another use.

See the Apple TV page and the setup guide.

## Beo4 - LG TV Everyday Control Table - Beo4 Navi

**TV control tables - when the center key  
of the Beo4    •    is a joystick \*1**



<b>LG TV Everyday Controls</b>	
<b>TV</b>	<b>LG TV power on</b>
●	<b>LG TV power off</b>
<b>VMEM</b>	<b>Source select menu</b>
<b>DTV</b>	<b>Source: Home *2</b>
<b>DVD</b>	<b>Source: Netflix *2</b>
<b>VAUX</b>	<b>Source: AppleTV *3</b>
• •	<b>Select</b>
▲ / ▼	<b>Program +/-</b>
◀	<b>Guide</b>
▶	<b>Options</b>
<b>BACK</b>	<b>Back -short press</b>
<b>BACK</b>	<b>EXIT -long press</b>
<b>MENU</b>	<b>Settings</b>
• •	Move the stick for on screen manoeuvring.
Green arrow	<i>Green function</i>
Red arrow	<i>Red function</i>
Yellow arrow	<i>Yellow function</i>
Blue arrow	<i>Blue function</i>

<b>LG TV Text TV Controls</b>	
<b>TEXT</b>	<b>Text TV on/ mix</b>
GO TEXT	<b>Text options</b>

**\*1 Center key**

If center key on the Beo4 is a GO refer to the "Go" control table on the opposite page.

**\*2 Source select**

These source keys, preset to select SmartTV sources, may be programmed for another use. Refer to the setup guide.

**\*3 Apple TV**

This source key, preset to open the HDMI3 source and then change control to an AppleTV receiver, may be programmed for another use. See the Apple TV page and the setup guide.

## Playback Control Tables

If a USB drive is connected to the LG TV, playback is controlled as shown in the tables below. These controls are also applied for playback using the SmartTV APPS.

LG TV Playback Controls	
	Play, long press
	Stop
	Pause
	Record
	Rewind
	FF

LG TV Playback Controls Beo4 Navi	
	Play
	Stop
	Pause
	Record
	Rewind
	FF

## Apple TV Control Tables

In the *factory default setting* the OneRemote converter can control an AppleTV after pressing **DVD**. First the LG TV will open the TV's HDMI3 source and hereafter the Beo4 remote control will shift to direct control of the Apple TV, according to the tables below.

During setup source and control may have been altered. Refer to the Setup Guide.

AppleTV Power Power	
	Power on
	Power on, short press
	Power off, long press

AppleTV Control	
	Menu
	Play/ pause
	Enter
	Use arrow keys for screen manoeuvring.

AppleTV Control – Beo4 Navi	
	Menu
	Play/ pause
	Enter
	Move the stick for on screen manoeuvring.

## Control Tables LG TV – Special Controls

---

In addition to the controls in the “Everyday Control Tables” some special controls are available. These are shown in below tables.

LG TV Special Controls			LG TV Special Controls – Beo4 Navi		
	<b>EXIT</b>	Options		<b>EXIT</b>	Options
	<b>MENU</b>	Home		<b>MENU</b>	Home
	<b>1</b>	LIST		<b>1</b>	LIST
	<b>2</b>	TV/ Radio		<b>2</b>	TV/ Radio
	<b>3</b>	Search		<b>3</b>	Search
	<b>4</b>	Netflix		<b>4</b>	Netflix
	<b>5</b>	Movies		<b>5</b>	Movies
	<b>6</b>	Subtitle		<b>6</b>	Subtitle
	<b>7</b>	Analog Description		<b>7</b>	Analog Description
	<b>9</b>	Power		<b>9</b>	Power

## Temporarily disabling the OneRemote TV Conversion

---

A OneRemote modified Beo4 remote control controls non-Bang & Olufsen devices, in this case a LG TV. But it is possible quickly to disable/ enable conversion, thus being able to control both a non-Bang & Olufsen LG TV and alternatively a Bang & Olufsen TV.

Simply, at any time, enter the two-key sequences from below table.

<b>TV</b>	Controls a Bang & Olufsen TV:	Volume down followed by <b>0</b>
<b>TV</b>	Controls a LG TV <i>factory default</i> :	Volume down followed by <b>1</b>