

# Setup Guide



## OneRemote RMB4 Converter for Beo4

Type 35104354

controls

### Apple

MAC PC  
Apple TV  
iPod dock



## Setup Guide for the OneRemote RMB4 Converter

With a OneRemote RMB4 converter installed in your Bang & Olufsen Beo4 remote control terminal you may control both a Bang & Olufsen and an Apple device with that modified terminal. This guide explains alternative setting options enabling you to select the easiest.


There are 3 Manuals for this Modified Bang & Olufsen Beo4 Remote Control:	
<b>User Manual</b>	<i>For all Beo4 models.</i>
<b>Setup Guide</b>	<i>Setting options</i>
<b>Installation Guide</b>	<i>Installing the converter in the Beo4.</i>

## RMB4 Converter for Apple and B&O Products

With the RMB4 converter installed in the Beo4 it still controls all B&O devices unchanged, but with the additional possibility of controlling an Apple device too.

The factory default delivery of the programmed RMB4 converter options is, when pressing the Beo4 **SAT** or **DTV** key it will change control to Apple devices, connected to the V.AUX input of the B&O TV.

*If another source key than **DTV** is preferred for activation of the Apple device, it may be preset with the Green Option. See page 2.  
If another input socket on the than the one corresponding to V.AUX is preferred, it may be preset with the Yellow Option. See page 2.*

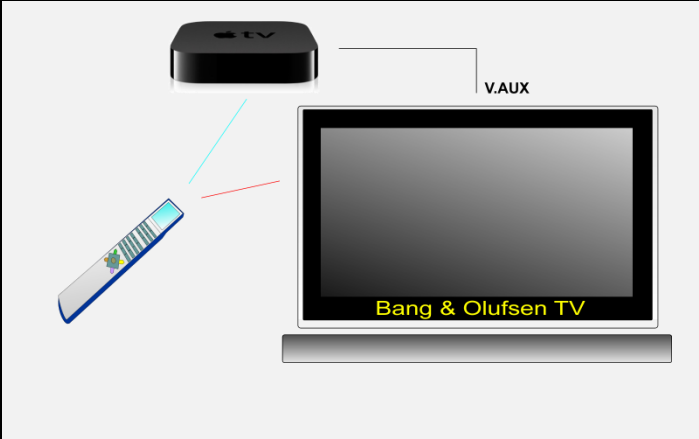


**Example 1:** Press **DTV** once and:

Green option = 02  
Yellow option = 07

*These are the factory default options.*

- B&O TV shifts to its VAUX socket.
- Beo4 now control the Apple TV or MAC PC.

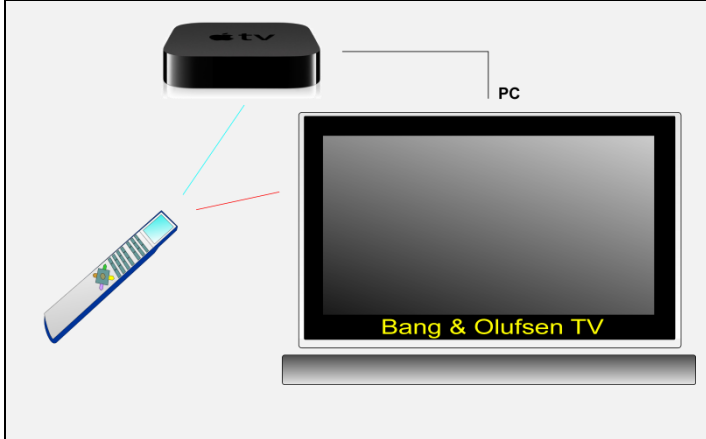

**Example 2:** Press **VMEM** once and:

Green option = 00  
Yellow option = 11

- B&O TV shifts to its PC socket.
- Beo4 now control the Apple TV or MAC PC.

## Source key converter option

As default factory setting, the Beo4 **SAT** or **DTV** key will Power on the B&O TV, ifn case it is powered off, and switch it to its V.AUX source.

Hereafter control with Beo4 will change to control the Apple device.

If another key and source than DTV and V.AUX is preffered, it can be changed with entering an option. Se page 4.

The converter also has a special option, used to change other source keys, that are **not** related to the use of an Apple device. Se the table below.

### Extra source conversion

*Enter a key sequence from the table below to program the RMB4 converter for another source selection key.*

*Enter one of these option sequences within 10 seconds:*

No special source key change	<b>LIGHT</b> <b>MENU</b> <b>STOP</b> <b>6</b> <b>0</b> <b>●</b> <i>The factory default</i>
- TV button operates as V.MEM	<b>LIGHT</b> <b>MENU</b> <b>STOP</b> <b>6</b> <b>1</b> <b>●</b>
- TV button operates as VMEM - V.MEM button operates as V.AUX	<b>LIGHT</b> <b>MENU</b> <b>STOP</b> <b>6</b> <b>2</b> <b>●</b>

## Green Source Selection Options

Enter a key sequence from the table below to program the RMB4 converter for another source selection key.




























Enter one of these option sequences within 10 seconds:

VMEM/ VTAPE	LIGHT	MENU		0	0		
VMEM2/ VTAPE2	LIGHT	MENU		0	1		
DTV/ SAT	LIGHT	MENU		0	2		<i>The factory default</i>
DVD	LIGHT	MENU		0	4		
CAMCORD	LIGHT	MENU		0	5		
TV	LIGHT	MENU		0	6		
VAUX	LIGHT	MENU		0	7		
PC	LIGHT	MENU		1	1		
CD	LIGHT	MENU		1	4		
CD2	LIGHT	MENU		1	5		
AMEM/ ATAPE	LIGHT	MENU		1	6		
AMEM2/ NMUSIC/ ATAPE2	LIGHT	MENU		1	7		
PHONO/ NRADIO	LIGHT	MENU		1	8		
AAUX	LIGHT	MENU		1	9		

## Yellow Socket Selection Options

Enter the key sequences from the table below to program the RMB4 converter for another socket selection.

Enter one of these option sequences within 10 seconds:

VMEM/ VTAPE	LIGHT	MENU		0	0		
VMEM2/ VTAPE2	LIGHT	MENU		0	1		
DTV/ SAT	LIGHT	MENU		0	2		
DVD	LIGHT	MENU		0	4		
CAMCORD	LIGHT	MENU		0	5		
TV	LIGHT	MENU		0	6		
VAUX	LIGHT	MENU		0	7		<i>The factory default</i>
PC	LIGHT	MENU		1	1		
CD	LIGHT	MENU		1	4		
CD2	LIGHT	MENU		1	5		
AMEM/ ATAPE	LIGHT	MENU		1	6		
AMEM2/ NMUSIC/ ATAPE2	LIGHT	MENU		1	7		
PHONO/ NRADIO	LIGHT	MENU		1	8		
AAUX	LIGHT	MENU		1	9	