


# Setup Guide

## OneRemote RMB4 Converter for Beo4

Type 35104381

## Samsung Player

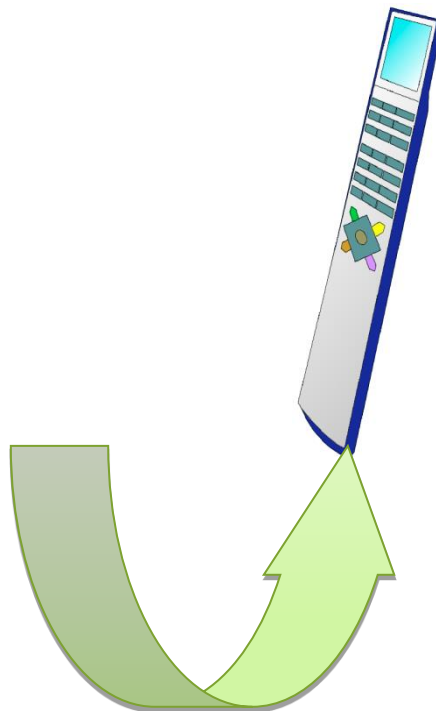

## Setup Guide for OneRemote RMB4 Converter

---

With a OneRemote RMB4 converter installed in your Bang & Olufsen Beo4 remote control terminal you may control both a Bang & Olufsen and a Samsung player with that terminal. This guide explains alternative setting options.

There are 4 manuals for this modified Bang & Olufsen Beo4 remote control:

<b>User manual</b>	<i>For Beo4 with a Go button.</i>
<b>User manual</b>	<i>For Beo4 Play with a Joystick instead of a Go button</i>
<b>Setup Guide</b>	<i>Setting options</i>
<b>Installation guide</b>	<i>Installing the converter in the Beo4.</i>

### RMB4 converter for Samsung and B&O products.

---

When the RMB4 converter is installed in a Beo remote control, it can still control all B&O devices as before. Only now it is possible also to control a Samsung player as well.

From factory an option has been programmed in the OneRemote converter, so a press on the **DVD** button will change control to a Samsung player. At the same time a **DVD** command is sent to a Bang & Olufsen TV, making it shift to the associated socket.

If another source key than **DVD** is preferred, it can be chosen with the Green Option.

If another socket than **DVD** is preferred, it can be chosen with the Yellow Option.





























## Setting the Green Option

From factory the Green Source selection key option has been programmed in the OneRemote converter, so a press on the **DVD** button will change control to a Samsung player.

Enter a key sequence from the table below, to program the OneRemote converter for another source selection key.

### Green source selection Options

*Enter one of these option sequences within 10 seconds:*

VMEM/ Vtape	LIGHT	MENU		0	0	
VMEM2/ Vtape2	LIGHT	MENU		0	1	
DTV/ Sat	LIGHT	MENU		0	2	
DVD	LIGHT	MENU		0	4	
Camcorder	LIGHT	MENU		0	5	
TV	LIGHT	MENU		0	6	
VAUX	LIGHT	MENU		0	7	
PC	LIGHT	MENU		1	1	
CD	LIGHT	MENU		1	4	
CD2	LIGHT	MENU		1	5	
AMEM/ Atape	LIGHT	MENU		1	6	
AMEM2/ NMUSIC/ Atape2	LIGHT	MENU		1	7	
Phono/ NRADIO	LIGHT	MENU		1	8	
AAUX	LIGHT	MENU		1	9	















## Setting the Yellow Option

From factory the Yellow Socket selection option has been programmed in the OneRemote converter, so a press on the **DVD** button will select **DVD** on a B&O TV.

Enter the key sequences from the table below, to program the OneRemote converter for another socket selection.

### Yellow socket selection Options

*Enter one of these option sequences within 10 seconds:*

VMEM/ Vtape	LIGHT MENU  0 0 ●
VMEM2/ Vtape2	LIGHT MENU  0 1 ●
DTV/ Sat	LIGHT MENU  0 2 ●
DVD	LIGHT MENU  0 4 ●
Camcorder	LIGHT MENU  0 5 ●
TV	LIGHT MENU  0 6 ●
VAUX	LIGHT MENU  0 7 ●
PC	LIGHT MENU  1 1 ●
CD	LIGHT MENU  1 4 ●
CD2	LIGHT MENU  1 5 ●
AMEM/ Atape	LIGHT MENU  1 6 ●
AMEM2/ NMUSIC/ Atape2	LIGHT MENU  1 7 ●
Phono/ NRADIO	LIGHT MENU  1 8 ●
AAUX	LIGHT MENU  1 9 ●