


User manual 1

Converter installed in a Beo4 with a  key



OneRemote RMB4 Converter for Beo4



Type 35104401 controls

Samsung TV all TV models + Apple




With a OneRemote RMB4 converter installed in your Bang & Olufsen Beo4 remote control terminal you may control any Samsung TV with that terminal. This guide explains how.

There are 3 user manuals for this modified Bang & Olufsen Beo4 remote control:

User manual TV	When your Beo4 has a  key. <i>see picture below.</i>
User manual TV	When your Beo4 has a  key.
User manual Apple TV	Any Beo4 model.

This manual covers

Beo4 models with a  key.

=



Beo4 models 16xx











Beo4 models 17xx

*Center key as a small joystick.
Refer to the other user manual.*



TV Control Tables

Samsung TV Everyday Controls

TV	TV powers on
●	TV powers off
VMEM	Source menu
GO GO	Enter
DVD	HDMI 1
SAT / DTV	HDMI 2 Apple control <i>*1</i>
 / 	Program zap up/ down
	TV-Guide
	Back one step
EXIT	Exits a menu
MENU	Menu
GO 	Green function
GO 	Red function
GO 	Yellow function
GO 	Blue function
▲ / ▼	Use arrows for screen manoeuvring.
◀ / ▶	

*1 A press on **DTV** makes:

1. The TV shift to its HDM2 source.
2. Control shifts from TV to AppleTV.

Samsung TV Text TV Controls


TEXT	Text TV on/ mix
TV	Text TV off

Samsung TV Playback Controls

GO	0	Play/ pause
STOP	STOP	Stop
GO	◀◀	Rew
GO	▶▶	FF
GO	8	Record

Samsung TV Special Controls

GO	1	Previous channel
GO	2	Channel list
GO	3	Media Player
GO	4	Info
GO	5	Content
GO	6	Subtitle
GO	7	Sound settings
GO	9	3D
STOP	EXIT	Internet
STOP	MENU	HDMI

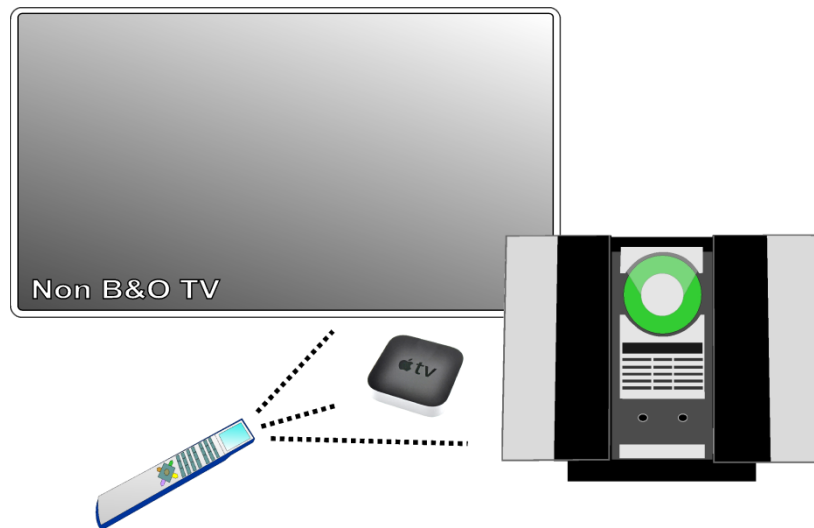

Your OneRemote RMB4 modified Bang & Olufsen Beo4 may operate a Samsung TV, an AppleTV and other Bang & Olufsen devices. You might even enjoy the TV sound via your Bang & Olufsen speakers, if connected.