

User manual 2

Converter installed in a Beo4 without a 💩 key



OneRemote RMB4 Converter for Beo4

Type 35104403 controls

Panasonic TV


all TV models





With a OneRemote RMB4 converter installed in your Bang & Olufsen Beo4 remote control terminal you may control any Panasonic TV with the terminal. This guide explains how.

There are 2 user manuals for this modified Bang & Olufsen Beo4 remote control:		
User manual TV	When your Beo4 has a 🥯 key. see picture below.	
User manual TV	When your Beo4 has a 🔸 key.	

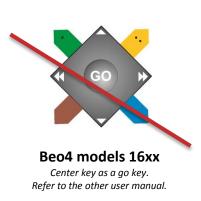





TV Control Tables



Panasonic TV Everyday Controls		
TV	TV powers on	
	TV powers off	
VMEM	AV Source menu	
DTV	TV Source menu	
-∳- VMEM	Home	
-∳∳-	Enter	
▲ / ▼ ↔	Program +/- Guide Option	
BACK BACK	Return – short press Exit – press 1 sec.	
MENU	Menu	
© MENU	APPS	


(o •	•} •	Move the stick for on screen manoeuvring.
		Green function
		Red function
		Yellow function
		Blue function

Panasonic TV Text TV Controls		
TEXT	Text TV on/ mix	
BACK	Exit – press 1 sec.	

Panasonic TV Playback Controls			
PLAY	Play		
STOP STOP	Stop		
-∳- STOP	Pause		
◎ ↔ / →	Rew/ FF		
⑤ ▲ / ▼	Next/ Previous		
-∳- 8	Record		

Panasonic TV Special Controls		
-∳- 1	Last view	
-∳- 2	Viera tool	
-∳- 4	info	
-∳- 5	Mediaplayer	
-∳- 6	Viera link	
-∳- 7	Viera Cast/ Internet	
-∳- 9	3D	
STOP EXIT	Aspect	
STOP MENU	eHelp	
DVD	HDMI 1	



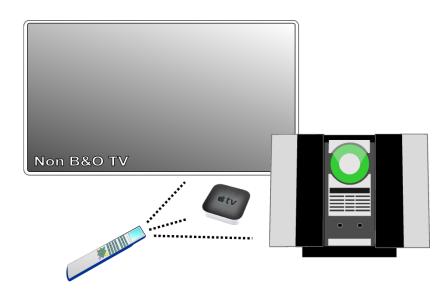

Your OneRemote RMB4 modified Bang & Olufsen Beo4 may operate a Panasonic TV and other Bang & Olufsen devices. You might even enjoy the TV sound via your Bang & Olufsen speakers, if connected.