


# User manual 2

Converter installed in a Beo4 without a  key



## OneRemote RMB4 Converter til Beo4



Type 35104404 controls

**LG TV**  
all TV models + Apple




With a OneRemote RMB4 converter installed in your Bang & Olufsen Beo4 remote control terminal you may control any Samsung TV with the terminal. This guide explains how.

 
There are 3 user manuals for this modified Bang & Olufsen Beo4 remote control:

<b>User manual TV</b>	When your Beo4 has a  key. <i>see picture below.</i>
<b>User manual TV</b>	When your Beo4 has a  key.
<b>User manual Apple TV</b>	Any Beo4 model.

**This user manual covers**


Beo4 models without a  key

=

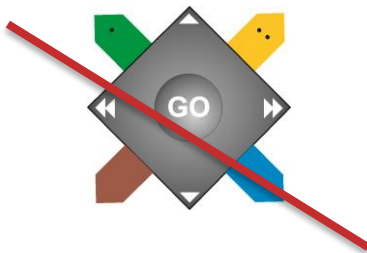

**Beo4 models 16xx**

 *Center key as a go key.  
Refer to the other user manual.*

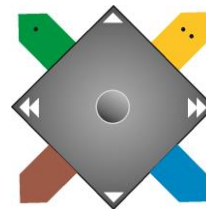

**Beo4 models 17xx**



## TV Control Tables

### LG TV Everyday Controls

<b>TV</b>	TV select
<b>TV</b> / <b>TV</b>	TV power ON/ OFF
<b>VMEM</b>	AV Source menu
⬇ / ⬆	OK
▲ / ▼	Program +/-
◀	TV Guide
▶	Option
<b>BACK</b>	Return – kort tryk
<b>BACK</b>	Exit – tryk 1 sek.
<b>MENU</b>	Settings
GO <b>MENU</b>	Q.menu

### LG TV Text TV Controls

<b>TEXT</b>	Text TV OFF/ ON/ MIX
<b>TV</b>	Text Exit – press 1 sek.

 
### LG TV Playback Controls

<b>PLAY</b>	Play
<b>STOP</b> / <b>STOP</b>	Stop
⬇ / <b>STOP</b>	Pause
GO ◀ / ▶	Rew/ FF
⬇ / <b>8</b>	Record

### LG TV Special Controls

⬇ / <b>1</b>	Fav
⬇ / <b>2</b>	List
⬇ / <b>3</b>	Radio/ TV
⬇ / <b>4</b>	Info
⬇ / <b>5</b>	Home
⬇ / <b>6</b>	My Apps
⬇ / <b>7</b>	Text Options
⬇ / <b>9</b>	3D
<b>STOP</b> / <b>EXIT</b>	Ratio
⬇ / <b>EXIT</b>	APP

⬅ / ➡	Move the stick for on screen manoeuvring.
⬇ / ⬆	Move the stick for on screen manoeuvring.
	Green function
	Red function
	Yellow function
	Blue function

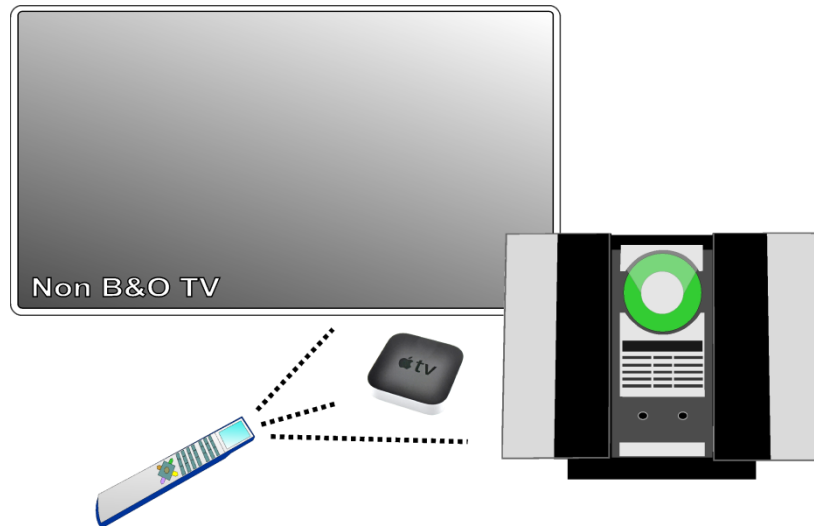

---

Your OneRemote RMB4 modified Bang & Olufsen Beo4 may operate a Samsung TV, an AppleTV and other Bang & Olufsen devices. You might even enjoy the TV sound via your Bang & Olufsen speakers, if connected.