

User manual 1


Converter installed in a Beo4 with a 🔹 key

OneRemote RMB4 Converter for Beo4


Type 35104426 controls

Thomson TV



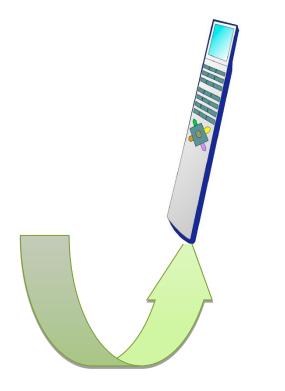

35104426g1uk

 

With a OneRemote RMB4 converter installed in your Bang & Olufsen Beo4 remote control terminal you may control any Thomson TV with that terminal. This guide explains how.

| There are 2 user manuals for this modified Bang & Olufsen Beo4 remote control: | | |
|--|--|--|
| User manual TV | When your Beo4 has a 🔤 key. see picture below. | |
| User manual TV | When your Beo4 has a 🔶 key. | |



Beo4 models 16xx



Beo4 models 17xx Center key as a small joystick. Refer to the other user manual.

TV Control Tables



| Thomson TV Ev | veryday Controls |
|---------------|-----------------------|
| ΤΥ ΤΥ | TV powers on/ off |
| ED ED | ОК |
| / | Program zap up/ down |
| | TV-Guide |
| • | Back one step |
| MENU | Menu |
| GO MENU | Home |
| GO 1 | Option |
| GO 2 | Smart TV |
| 60 3 | Source |
| | |
| GO | Green function |
| GD 📂 | Red function |
| o 🥖 | Yellow function |
| E0 \ | Blue function |
| ▲ / ▼ | Use arrows for screen |

manoeuvring.

Thomson TV Text TV Controls

Text TV on/ mix

TEXT

EXIT

GO

EXIT


Text TV off

| Thomson TV Playback Controls | | |
|------------------------------|------|-------------|
| GO | 0 | Play/ pause |
| STOP | STOP | Stop |
| GD | | Rew |
| GO | •• | FF |
| GO | 8 | Record |
| | | |

Thomson TV Special Controls EXIT Exits a menu GO 4 Info GO 5 List GO 6 FAV GO 7 Previous GO 3D 9

ΤV

◀ / ▶

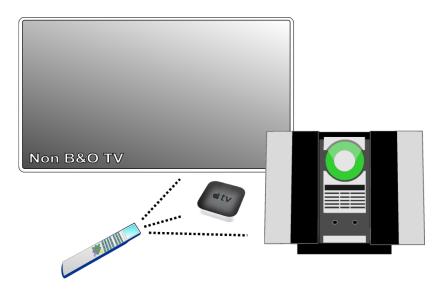

Your OneRemote RMB4 modified Bang & Olufsen Beo4 may operate a Thomson TV and other Bang & Olufsen devices. You might even enjoy the TV sound via your Bang & Olufsen speakers, if connected.