
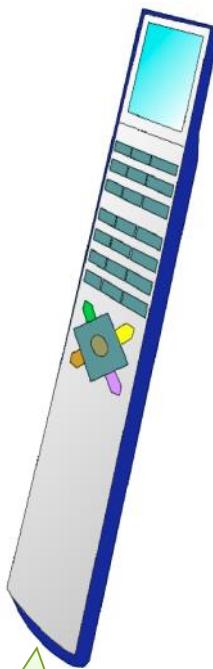


# User Manual

Converter installed in a Beo4

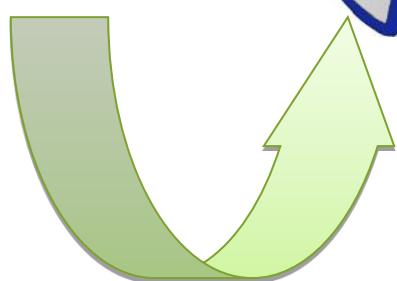

## OneRemote RMB4 Converter for Beo4

Type 35104451 controls

### Samsung TV all TV models

+ Apple TV



With a OneRemote RMB4 converter installed in your Bang & Olufsen Beo4 remote control terminal you may also control a Samsung TV with that terminal. You may still operate Bang & Olufsen devices.

The RMB4 factory setting will fit most users, making it possible to fully control a Samsung TV as with its original Samsung remote control.

This manual covers daily use. Refer to the Setup Manual for special installations where further integration is needed. Maybe setups including other Bang & Olufsen devices or even.

## Indhold

---

BEO4  SAMSUNG TV EVERYDAY CONTROL TABLE .....	3
<b>Samsung TV Everyday Controls</b> .....	<b>3</b>
<b>Samsung TV Text TV Controls</b> .....	<b>3</b>
PLAYBACK CONTROL TABLES .....	4
CONTROL TABLES SAMSUNG TV – SPECIAL CONTROLS .....	5
<b>Samsung TV Special Controls</b> .....	<b>5</b>
<b>Samsung TV Special Controls - Navi</b> .....	<b>5</b>
APPLE TV SPECIAL CONTROL TABLES .....	6
TEMPORARILY DISABLING THE ONEREMOTE TV CONVERSION .....	<b>FEJL!</b>
<b>BOGMÆRKE ER IKKE DEFINERET.</b>	
BEO4  SAMSUNG TV EVERYDAY CONTROL TABLE .....	7
<b>Samsung TV Everyday Controls</b> .....	<b>7</b>
<b>Samsung TV Text TV Controls</b> .....	<b>7</b>

## Beo4 Samsung TV Everyday Control Table



**TV control tables – when  is the center key of the Beo4 \*1**

Samsung TV Everyday Controls	
<b>TV</b>	TV powers on
<b>●</b>	TV powers off
<b>SAT / DTV</b>	Amazon
<b>DVD</b>	Netflix
<b>VAUX</b>	Apple TV receiver *2
<b>VMEM</b>	AV source selection
 press 1 second	<b>Enter</b>
 	<b>Enter</b>
 / 	<b>Program zap up/ down</b>
	<b>Guide</b>
	<b>Return</b>
<b>EXIT</b>	<b>Exit</b>
<b>MENU</b>	<b>Home</b>
 <b>MENU</b>	<b>Menu</b>
 	<i>Green function</i>
 	<i>Red function</i>
 	<i>Yellow function</i>
 	<i>Blue function</i>
 / 	<i>Use arrows for screen manoeuvring.</i>
 / 	

Samsung TV Text TV Controls	
<b>TEXT</b>	<b>Text TV</b>
<b>TV</b>	<b>Exit Text TV</b>

**\*1 Center key**

If the center key on the Beo4 is a joystick  refer to the "Navi" control table on the page 8.

**\*2 Apple TV**

This source key, factory preset to open the HDMI2 source and then change control to an AppleTV receiver, may be programmed for another use.

See the Apple TV page and the setup guide

## Playback Control Tables

If a USB drive is connected to the Samsung TV, playback is controlled as shown in the tables below. These controls are also applied for playback using the SmartTV APPS.

Samsung TV Playback Controls		
		Play
		Stop
		Pause
		Record
		Rewind
		FF

Samsung TV Playback Controls Beo4 Navi		
		Play
		Stop
		Pause
		Record
		Rewind
		FF

## Control Tables Samsung TV - Special Controls

In addition to the controls in the “Everyday Control Tables” some special controls are available. These are shown in below tables.

Samsung TV Special Controls		
	<b>0</b>	Tools
	<b>1</b>	Netflix
	<b>2</b>	Amazon
	<b>3</b>	Webbrowser
	<b>4</b>	Info
	<b>5</b>	List
	<b>6</b>	USB Wiselink
	<b>7</b>	3-Speed
	<b>9</b>	e-Manual

Samsung TV Special Controls - Navi		
	<b>0</b>	Tools
	<b>1</b>	Netflix
	<b>2</b>	Amazon
	<b>3</b>	Webbrowser
	<b>4</b>	Info
	<b>5</b>	List
	<b>6</b>	USB Wiselink
	<b>7</b>	3-Speed
	<b>9</b>	e-Manual

## Apple TV Special Control Tables

**Press **VAUX** \*1**

- Select HDMI2 on the TV
- Change Beo4 control to an Apple TV.

**Press **VAUX**  \*1**

- Power on/off an Apple TV.
- Select HDMI2 on the TV.
- Change Beo4 control to an Apple TV.

In addition to everyday controls, there are some special controls for the Apple TV. See the tables below.

### AppleTV Power

	Power on
	Power on, short press
	Power off, long press

### AppleTV Control

	Menu
	Play/ pause
	Enter
 	Use arrow keys for screen manoeuvring.
 	

### AppleTV Control – Beo4 Navi


	Menu
	Play/ pause
	Enter
 	Move the stick for on screen manoeuvring.
 	

\*1 Apple TV receiver source and input socket.

From factory the source key **VAUX** has been selected for control of the Apple TV. Another source can be used to shift control to the Apple TV instead of **VAUX** i.e. **DVD**, or **DTV**. See setup manual.

From factory the source key **VAUX** has been set to open for the Samsung TV's HDMI2 input. This can be changed to another input. See the setup manual.

## Beo4 • Samsung TV Everyday Control Table

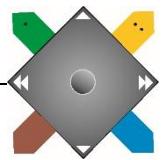

**TV control tables - when the center key of the Beo4 is a joystick \*1**

<b>Samsung TV Everyday Controls</b>	
<b>TV</b>	<b>TV powers on</b>
<b>●</b>	<b>TV powers off</b>
<b>VAUX</b>	<b>Apple TV *2</b>
<b>DVD</b>	<b>Netflix</b>
<b>SAT / DTV</b>	<b>Amazon</b>
<b>VMEM</b>	<b>Source selection</b>
• press 1 second	<b>Enter</b>
• •	<b>Enter</b>
▲ / ▼	<b>Program +/-</b>
◀	<b>TV-Guide</b>
▶	<b>Tools</b>
<b>BACK</b>	<b>Return – short press</b>
<b>BACK</b>	<b>Return – long press</b>
<b>MENU</b>	<b>Home</b>
• <b>MENU</b>	<b>Setup</b>
• •	Move the stick for on screen manoeuvring.
◀	<i>Green function</i>
▶	<i>Red function</i>
↑	<i>Yellow function</i>
↓	<i>Blue function</i>

<b>Samsung TV Text TV Controls</b>	
<b>TEXT</b>	<b>Text TV on/ mix</b>
<b>TV</b>	<b>Exit Text TV</b>

**\*1 Center key**

If center key on the Beo4 is a refer to the "Go" control table on page 3.

**\*2 Apple TV**

This source key, preset to open the HDMI2 source and then change control to an AppleTV receiver, may be programmed for another use. See the Apple TV page and the setup guide.