

User Manual

Converter installed in a Beo4



OneRemote RMB4 Converter for Beo4

Type 35104452 controls

Sony TV
all TV models



With a OneRemote RMB4 converter installed in your Bang & Olufsen Beo4 remote control terminal you may also control a Sony TV with that terminal. You may still operate Bang & Olufsen devices.

The RMB4 factory setting will fit most users, making it possible to fully control a Sony TV as with its original Sony remote control.


This manual covers daily use. Refer to the Setup Manual for special installations where further integration is needed. Maybe setups including other Bang & Olufsen devices or even.






















Contents

BEO4	📺	SONY TV EVERYDAY CONTROL TABLE	3
		Sony TV Everyday Controls	3
		Sony TV Text TV Controls.....	3
BEO4	📺	SONY TV EVERYDAY CONTROL TABLE	4
		Sony TV Everyday Controls	4
		Sony TV Text TV Controls.....	4
PLAYBACK CONTROL TABLES			6
APPLE TV CONTROL TABLES.....			6
CONTROL TABLES SONY TV – SPECIAL CONTROLS			7
		Sony TV Special Controls	7
		Sony TV Special Controls - Navi.....	7




Beo4 Sony TV Everyday Control Table

TV control tables – when  is the center key of the Beo4 *1

Sony TV Everyday Controls	
TV	TV powers on
	TV powers off
SAT / DTV	Youtube *3
DVD	Netflix
VAUX	Apple TV *2
 TV	Shortcut to VAUX *4
VMEM	Source selection
	Enter, press 1 sec.
 	Enter, mouseclick
 / 	Program zap up/ down
	Guide
	Return
EXIT	Exit
MENU	Menu
 	Green function
 	Red function
 	Yellow function
 	Blue function
 / 	Use arrows for screen manoeuvring.
 / 	

Sony TV Text TV Controls	
TEXT	Text TV
TV	Exit Text TV

***1 Center key**

If the center key on the Beo4 is a joystick  refer to the "Navi" control table on the opposite page.

***2 Apple TV**

This source key, factory preset to open the HDMI2 source and then change control to an AppleTV receiver, may be programmed for another use.

See the Apple TV page and the setup guide

***3 Youtube**


This source key, is factory preset to open the TV's Youtube browser. This only works on SmartTV models with this function.


















***4 Shortcut to VAUX**

Selecting VAUX on a Beo4 is normally done via its List menu. This shortcut is another way to select the settings the VAUX settings.




Beo4  Sony TV Everyday Control Table

TV control tables - when the center key of the Beo4  is a joystick *1

Sony TV Everyday Controls	
TV	TV powers on
	TV powers off
DTV	Youtube *3
DVD	Netflix
VAUX	Apple TV *2
 TV	Shortcut to VAUX *4
VMEM	Source selection
	Enter, press 1 sec.
 	Enter, mouseclick
 / 	Program +/-
	TV-Guide
	Option
BACK	Return – short press
BACK	Return – long press
 	Audio - Radio
MENU	Menu
 	Move the stick for on screen manoeuvring.
	Green function
	Red function
	Yellow function
	Blue function

Sony TV Text TV Controls	
TEXT	Text TV on/ mix
TV	Exit Text TV

***1 Center key**

If center key on the Beo4 is a  refer to the "Go" control table on the opposite page.

***2 Apple TV**

This source key, preset to open the HDMI3 source and then change control to an AppleTV receiver, may be programmed for another use. See the Apple TV page and the setup guide.

***3 Youtube**

This source key, is factory preset to open the TV's Youtube browser. This only works on SmartTV models with this function.

***4 Shortcut to VAUX**

Selecting VAUX on a Beo4 is normally done via its List menu. This shortcut is another way to select the settings the VAUX settings.

Playback Control Tables

If a USB drive is connected to the Sony TV, playback is controlled as shown in the tables below. These controls are also applied for playback using the SmartTV APPS.

Sony TV Playback Controls		
		Play, <i>long press</i>
		Stop
		Pause
		Record
		Rewind
		FF

Sony TV Playback Controls Beo4 Navi		
		Play
		Stop
		Pause
		Record
		Rewind
		FF

Apple TV Control Tables

In the *factory default setting* the OneRemote converter can control an AppleTV after pressing **VAUX**. First the Sony TV will open the TV's HDMI2 source and hereafter the Beo4 remote control will shift to direct control of the Apple TV, according to the tables below.

During setup source and control may have been altered. Refer to the Setup Guide.







AppleTV Power	
	Power on
	Power on, short press
	Power off, long press







AppleTV Control		
	Menu	
	Play/ pause	
	Enter	
		Use arrow keys for screen manoeuvring.

AppleTV Control – Beo4 Navi		
	Menu	
	Play/ pause	
	Enter	
		Move the stick for on screen manoeuvring.

Control Tables Sony TV – Special Controls

In addition to the controls in the “Everyday Control Tables” some special controls are available. These are shown in below tables.

Sony TV Special Controls		
	1	Analog – Digital
	2	Options
	3	Previous
	4	Info
	5	Title List
	6	AV Sources
	7	Netflix
	9	Youtube

Sony TV Special Controls - Navi		
	1	Analog – Digital
	2	Options
	3	Previous
	4	Info
	5	Title List
	6	AV Sources
	7	Netflix
	9	Youtube