

# User Manual

Converter installed in a Beo4



## OneRemote RMB4 Converter for Beo4

Type 35104530 controls

## Philips TV all TV models

+ Apple TV





With a OneRemote RMB4 converter installed in your Bang & Olufsen Beo4 remote control terminal you may also control a Philips TV with that terminal. You may still operate Bang & Olufsen devices.

The RMB4 factory setting will fit most users, making it possible to fully control a Philips TV as with its original Philips remote control.

This manual covers daily use. Refer to the Setup Manual for special installations where further integration is needed. Maybe setups including other Bang & Olufsen devices or even.

## Indhold




















---

BEO4 	PHILIPS TV EVERYDAY CONTROL TABLE .....	3
	<b>Philips TV Everyday Controls .....</b>	<b>3</b>
	<b>Philips TV Text TV Controls .....</b>	<b>3</b>
	PLAYBACK CONTROL TABLES .....	4
	CONTROL TABLES PHILIPS TV – SPECIAL CONTROLS .....	5
	<b>Philips TV Special Controls.....</b>	<b>5</b>
	<b>Philips TV Special Controls - Navi.....</b>	<b>5</b>
	APPLE TV SPECIAL CONTROL TABLES .....	6
	TEMPORARILY DISABLING THE ONEREMOTE TV CONVERSION .....	7
BEO4 	PHILIPS TV EVERYDAY CONTROL TABLE .....	8
	<b>Philips TV Everyday Controls .....</b>	<b>8</b>
	<b>Philips TV Text TV Controls .....</b>	<b>8</b>

## Beo4 Philips TV Everyday Control Table




### TV control tables – when is the center key of the Beo4 \*1

Philips TV Everyday Controls	
<b>TV</b>	TV control
<b>TV</b> <b>TV</b>	TV powers on/ off
<b>SAT</b> / <b>DTV</b>	Apple TV *2
<b>DVD</b>	Netflix
<b>VMEM</b>	AV source selection
<b>MENU</b>	HOME
 <b>MENU</b>	Settings
 	Enter
 / 	Program zap up/ down
	Guide
	Return
<b>EXIT</b>	Exit
 	Green function
 	Red function
 	Yellow function
 	Blue function
 / 	Use arrows for screen manoeuvring.
 / 	

Philips TV Text TV Controls	
<b>TEXT</b>	Text TV
<b>TV</b>	Exit Text TV

**\*1 Center key**

If the center key on the Beo4 is a joystick  refer to the "Navi" control table on the page 8.












**\*2 Apple TV**












This source key, factory preset to open the HDMI2 source and then change control to an AppleTV receiver, may be programmed for another use.

See the Apple TV page and the setup guide

## Playback Control Tables










If a USB drive is connected to the Philips TV, playback is controlled as shown in the tables below. These controls are also applied for playback using the SmartTV APPS.





 




Philips TV Playback Controls		
		<b>Play, long press</b>
		<b>Stop</b>
		<b>Pause</b>
		<b>Record</b>
		<b>Rewind</b>
		<b>FF</b>

Philips TV Playback Controls Beo4 Navi		
		<b>Play</b>
		<b>Stop</b>
		<b>Pause</b>
		<b>Record</b>
		<b>Rewind</b>
		<b>FF</b>

## Control Tables Philips TV – Special Controls

In addition to the controls in the “Everyday Control Tables” some special controls are available. These are shown in below tables.

Philips TV Special Controls		
	<b>1</b>	List
	<b>2</b>	Netflix
	<b>3</b>	Multiview
	<b>4</b>	Info
	<b>6</b>	Search
	<b>7</b>	Ambilight
	<b>9</b>	Subtitle
	▲	Smart TV
	▼	Options




Philips TV Special Controls - Navi		
	<b>1</b>	List
	<b>2</b>	Netflix
	<b>3</b>	Multiview
	<b>4</b>	Info
	<b>6</b>	Search
	<b>7</b>	Ambilight
	<b>9</b>	Subtitle
	▲	Smart TV
	▼	Options








## Apple TV Special Control Tables








Press **DTV**

- Change Beo4 control to an Apple TV.

In addition to everyday controls, there are some special controls for the Apple TV. See the tables below.

AppleTV Power	
	Power on
	Power on, short press
	Power off, long press

AppleTV Control	
	Menu
	Play/ pause
	Enter
 	Use arrow keys for screen manoeuvring.
 	

AppleTV Control – Beo4 Navi	
	Menu
	Play/ pause
	Enter
 	Move the stick for on screen manoeuvring.
 	

## Temporarily disabling the OneRemote TV Conversion

---

A OneRemote modified Beo4 remote control controls non-Bang & Olufsen devices, in this case a Philips TV. But it is possible quickly to disable/ enable conversion, thus being able to control both a non-Bang & Olufsen Philips TV and alternatively a Bang & Olufsen TV.


Simply, at any time, enter the two-key sequences from below table.

















<b>TV</b>	Controls a Bang & Olufsen TV:	Volume down followed by <b>0</b>
<b>TV</b>	Controls a Philips TV <i>factory default</i> :	Volume down followed by <b>1</b>






## Beo4 Philips TV Everyday Control Table

**TV control tables - when the center key of the Beo4  is a joystick \*1**

Philips TV Everyday Controls	
<b>TV</b>	TV control
	TV powers on/ off
<b>DVD</b>	Netflix
<b>SAT</b> / <b>DTV</b>	Apple TV *2
<b>VMEM</b>	Source selection
 	Enter
 / 	Program +/-
	TV-Guide
	Options
<b>BACK</b>	Return – short press
<b>BACK</b>	Return – long press
<b>MENU</b>	Home
 <b>MENU</b>	Settings
   	Move the stick for on screen manoeuvring.
	Green function
	Red function
	Yellow function
	Blue function

Philips TV Text TV Controls	
<b>TEXT</b>	Text TV on/ mix
<b>TV</b>	Exit Text TV

**\*1 Center key**

If center key on the Beo4 is a  refer to the "Go" control table on page 3.

**\*2 Apple TV**

This source key, preset to open the HDMI2 source and then change control to an AppleTV receiver, may be programmed for another use. See the Apple TV page and the setup guide.