




**OneRemote Adaptors
ASNUT & VSNUT**

Type 39207432 ASNUT
Type 39207434 VSNUT

User Manual

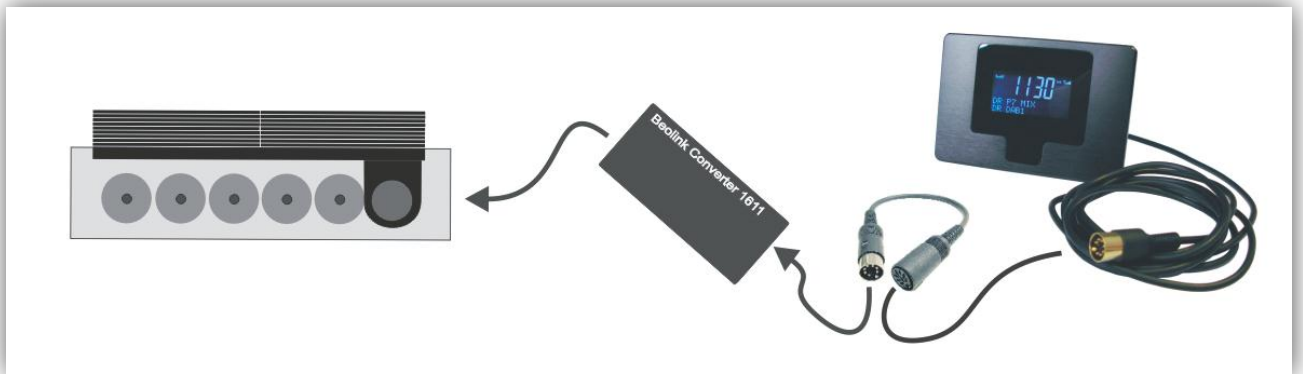


VSNU

The Bang & Olufsen audiomaster controls the OneRemote audio device via a BeoLink Converter, type 1611 or 1612. The audiomaster connects with a MasterLink cable to the Converter, and via a VSNU the OneRemote audio device connects to the Converter's AAL socket.

Note:

- The OneRemote audio device needs to be option programmed as an **video** source in the CableLink Mode. *See the OneRemote User Manual for details.*
- The Bang & Olufsen audiomaster needs to be option 2 programmed. *See the Bang & Olufsen User Manual for details.*
- Provision for this set up is that no other video source conflicts on the MasterLink.

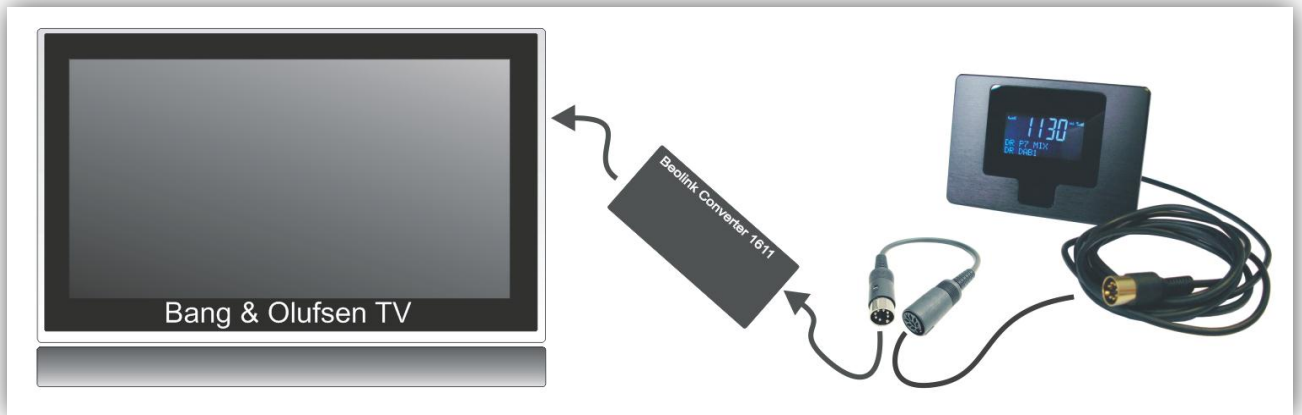

ASNUT

The Bang & Olufsen videomaster controls the OneRemote audio device via a BeoLink Converter, type 1611 or 1612. The videomaster connects with a MasterLink cable to the Converter, and via an ASNUT the OneRemote audio device connects to the Converter's AAL socket.

Note:

- The OneRemote audio device needs to be option programmed as an **audio** source in the CableLink Mode. *See the OneRemote User Manual for details.*
- The Bang & Olufsen videomaster needs to be option 2 programmed. *See the Bang & Olufsen User Manual for details.*
- Provision for this set up is that no other audio source conflicts on the MasterLink.