

Beo4 and Beolink 1000 are remote control terminals from Bang & Olufsen. Oneremote supplies interface modules that allow third party equipment to be operated via a Bang & Olufsen remote control system.






### Congratulations

With the interface module from [www.one-remote.dk](http://www.one-remote.dk) installed inside to your B&O Beo4 remote control terminal, you can directly operate your TV. This user guide tells you how.

### Operating with Beo4

Beo4 does not have as many keys as the TV's original remote control. Thus certain Beo4 keys have got alternative functionality.

To get to this  has to be pressed first, i.e.  followed by  on the Beo4 corresponds to the actual red button on the original remote control.

The table on the opposite side shows how special Beo4 key operations translate to operations of the original remote control.

To be able to operate the TV correctly with the Beo4 the user **has to be familiar with operations with the original remote control** as described in the TV's user manual.

### Options

The TV can be a part of different setups even with original B&O devices. In order to optimize these setups, the Beo4 can to be programmed with options. Option programming is usually performed in the installation phase, not during the daily use. See the installation guide about programming.



 
 
#### Source selection option.

When a source like VMEM, DTV or another is selected, an option chooses which input on the TV, will be accessed.

#### Audiomaster mode option.

This option makes it possible to use any Bang & Olufsen audiomaster to handle the sound. This improves the sound quality to the level of the speakers attached to the audiomaster.

#### Programme zapping option.

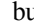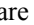










The beo4/ beo5 buttons  and  are factory preset for programme stepping. The  and  buttons are used for manoeuvring up and down in an on screen menu.

The programme zap option exchanges operation functions of the blue/ yellow and up/ down buttons.














#### Disable controller option.

If the remote control is no longer to be used to operate a B&O TV, an option can disable the OneRemote controller.












### Daily operation

	Power on
	Power off
 	Enter
 *1*2	P+
 *1*2	P-
 *2	TV/ DTV
 *2	Return
	Exit
 	Picture format

 
### PIP & special text operations







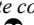

 	PIP on/ off
 	PIP position
 	PIP Swap
	Text tv on/ off
 	TXT release
 	TXT stop
 	TXT i

### Other special functions

	Home Menu
 	EPG
 	i+
 	HDMI control CEC
 	I-II
 	Subtitling

\*1 It is possible to exchange the up/ down arrow the functions with the blue and yellow buttons. See the installation guide.

\*2 As the direct function of the coloured buttons on the Beolink remote control has been reassigned to other functions,  has to be pressed before these buttons, to get to the colour function.

 	Red function
 	Green Function
 	Yellow function
 	Blue function