



Beocompatible functions

**Oneremote Interface type 4369
Sony flatscreen TV**

RM-ED009, RM-ED010, RM-ED011, RM-ED013



Beo4 and Beolink 1000 are remote control terminals from Bang & Olufsen. Oneremote supplies interface modules that allow third party equipment to be operated via a Bang & Olufsen remote control system.



Congratulations

With the interface module from www.one-remote.dk installed inside to your B&O Beo4 remote control terminal, you can directly operate your Sony TV. This user guide tells you how.

Operating with Beo4

Beo4 does not have as many keys as the TV's original remote control. Thus certain Beo4 keys have got alternative functionality.

To get to this has to be pressed first, i.e. followed by on the Beo4 corresponds to the actual red button on the original remote control.

The table on the opposite side shows how special Beo4 key operations translate to operations of the original remote control.

To be able to operate the TV correctly with the Beo4 the user **has to be familiar with operations with the original remote control** as described in the TV's user manual.

Options

The TV can be a part of different setups even with original B&O devices. In order to optimize these setups, the Beo4 can to be programmed with options. Option programming is usually performed in the installation phase, not during the daily use. See the installation guide about programming.

Source selection option.

When a source like VMEM, DTV or another is selected, an option chooses which input on the TV, will be accessed.

Audiomaster mode option.

This option makes it possible to use any Bang & Olufsen audiomaster to handle the sound. This improves the sound quality to the level of the speakers attached to the audiomaster.

Programme zapping option.

The beo4/ beo5 buttons and are factory preset for programme stepping. The and buttons are used for manoeuvring up and down in an on screen menu.

The programme zap option exchanges operation functions of the blue/ yellow and up/ down buttons.

Disable controller option.

If the remote control is no longer to be used to operate a B&O TV, an option can disable the OneRemote controller.

Daily operation



Power on
Power off



Enter



*1*2



*1*2



*2



*2

