User manual 1

Converter installed in a Beo4 with a **GO** *key*

35104406g1uk

With a OneRemote RMB4 converter installed in your Bang & Olufsen Beo4 remote control terminal you may control any Loewe TV with that terminal. This guide explains how.
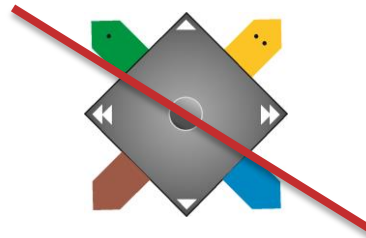
There are 3 user manuals for this modified Bang & Olufsen Beo4 remote control:
User manual TV   *When your Beo4 has a* 🔘 *key.*   *see picture below.*
User manual TV   *When your Beo4 has a* ✦ *key.*
User manual Apple   *Any Beo4 model.*

This manual covers
Beo4 models with a 🔘 key.

Beo4 models 16xx

Beo4 models 17xx
Center key as a small joystick.
Refer to the other user manual.

TV Control Tables

Loewe TV Everyday Controls

TV		TV powers on
●		TV powers off
SAT / DTV		Apple control *1
GO	GO	Enter
yellow / blue		Program zap up/ down
green		EPG
red		END
GO	▲	Assist
GO	▼	Radio
EXIT		END
MENU		Menu

*1
A press on this key change operation from Loewe TV to Apple TV/ MAC PC. Refer to the OneRemote user manual for Apple.

GO	green	*Green function*
GO	red	*Red function*
GO	yellow	*Yellow function*
GO	blue	*Blue function*
▲ / ▼ ◀◀ / ▶▶		*Use arrows for screen manoeuvring.*

Loewe TV Text TV Controls

TEXT	Text TV
TV	Exits Text TV

Loewe TV Special Controls

GO	1	Format
GO	2	Picture menu on/ off
GO	3	Picture adjust
GO	4	info
GO	6	Sound
GO	7	PIP
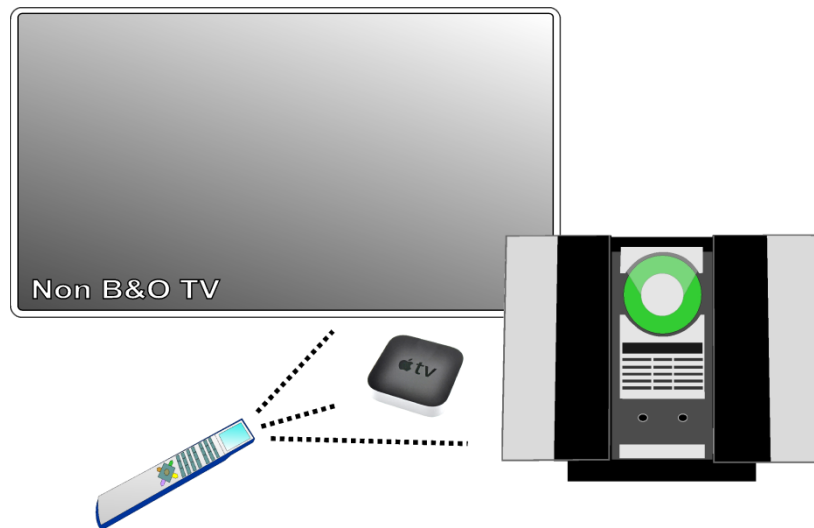
Your OneRemote RMB4 modified Bang & Olufsen Beo4 may operate a Loewe TV and other Bang & Olufsen devices. You might even enjoy the TV sound via your Bang & Olufsen speakers, if connected.