


BeoLink Active

Setting-up Guide

BANG & OLUFSEN

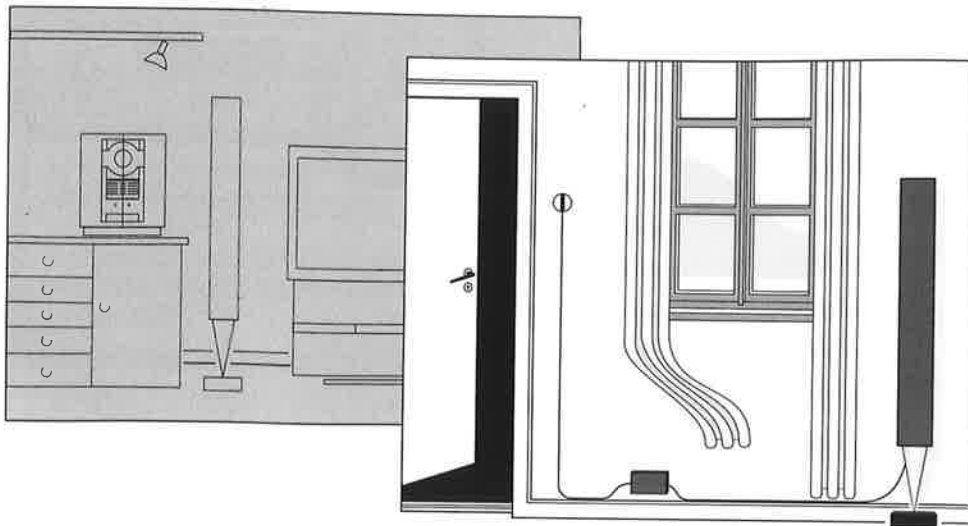

Setting-up guide

This guide describes how to install your BeoLink Active kit in a BeoLink distribution system.

If you have never carried out cable installation before, we suggest you leave it to your Bang & Olufsen retailer. Likewise, we recommend that you follow the instructions in this guide carefully.

The Guide which is also supplied with the BeoLink Active kit describes how to operate your system once it has been installed.

BeoLink system


The BeoLink distribution system enables you to control your main system and to hear it in the Link room. Your Link room must be connected to the main room via a special (Master Link) cable. To join the Master Link cable from the main system and the cable from the BeoLink Active box you will need a Master Link junction box. These accessories can be purchased from your Bang & Olufsen retailer

Please note that you cannot distribute sound from your link room through BeoLink Active to your main room.

The main room is the room in which you have placed your audio system and/or video system (the main system). The link room is where you are about to set up the BeoLink Active with a pair of active speakers.

When you set up your BeoLink Active kit, we recommend the following sequence:

- 1 Switch off all products and disconnect them from the mains.
- 2 Make your installation.
- 3 Connect all products to the mains.
- 4 Carry out the preprogramming.


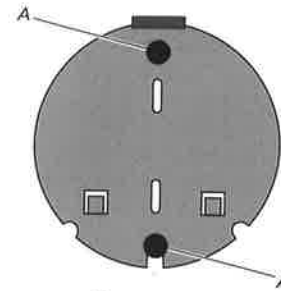


To fasten the BeoLink Active receiver to the wall:

- 1 Using the wall bracket as a template, mark and drill the holes in the wall.
- 2 Using the two screws and wall plugs supplied (A), fasten the wall bracket.
- 3 When you have mounted the receiver cable (see page 5) hang the receiver on the wall bracket and then secure it with the tiny screw (B).
- 4 Fasten the cable to the wall and run it to the BeoLink Active box.

In the following we have listed some advice and requirements for the placement of the BeoLink Active:

- The units in the system must all be placed in a dry place, i.e. not outdoors (the Master Link cable, however, may very well be run outdoors). Once connected, the BeoLink Active box should be fastened to the wall – e.g. concealed behind a curtain or a piece of furniture.
- Place the BeoLink Active receiver so it can receive the remote control signals.
- If the receiver is placed next to a door and at a suitable height, you can easily switch on or off by close-up operation when entering or leaving the room. Likewise, if it is placed near your telephone, you can switch off the speakers while you are on the phone.
- Avoid placing the receiver in direct sunlight or direct artificial light, e.g. a spotlight, or near objects generating electrical noise, e.g. light dimmers, as this will reduce the sensitivity of the receiver.
- The receiver is designed to function within a temperature range of 0 – 55°C (32 – 130°F). If it is exposed to higher or lower temperatures, it may block the whole system. The box is designed to function within a temperature range of 10 – 40°C (50 – 105°F).
- The receiver cable supplied is 5 metres (15'). This is the maximum length of cable to be used.

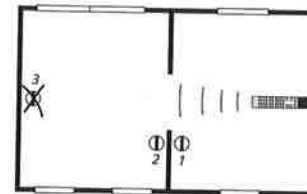
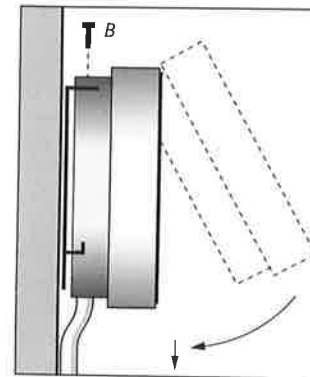


If you have installed more units throughout the house, make sure that the remote control can only activate one receiver at a time.


Cables should always be handled with great care. When running the cables, avoid bending them too sharply and be careful not to twist them. Avoid subjecting the cables to pressure or impact.

Using the cable supplied, connect the BeoLink Active receiver as follows:

- 1 Detach the rear cover of the BeoLink Active receiver (unscrew the two screws (C) and loosen the two screws (D), then lift off the cover).
- 2 Cut the cable to the required length (from the BeoLink Active box to the receiver) and strip it as shown.
- 3 Insert the cable end through the cable clamp (E) and connect the leads to the terminals inside the receiver in the order indicated. Then tighten the clamp (E).
- 4 Attach the rear cover again and fasten the BeoLink Active receiver to the wall (see page 4).
- 5 Plug the cable into the socket marked IR on the BeoLink Active box.

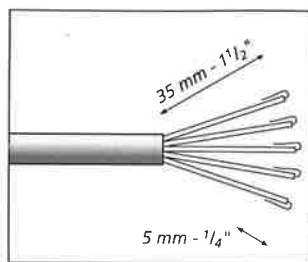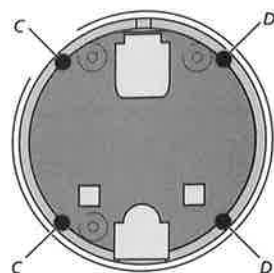

Strip the cable end. Twist the cores in each lead and bend them back.

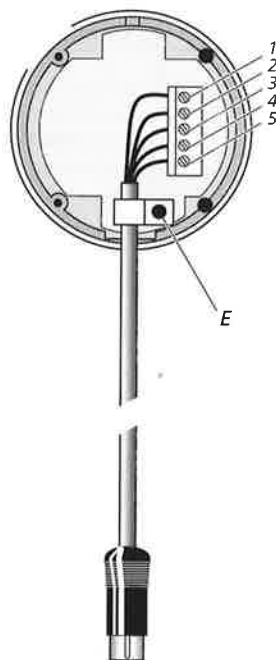


Connect the leads in the receiver cable to the terminals inside the receiver in this order:


- 1 = Yellow
- 2 = Grey
- 3 = Green
- 4 = White
- 5 = Brown

NOTE! Disconnect your entire Bang & Olufsen system from the mains while you make the connections!

Master Link connection to the main system

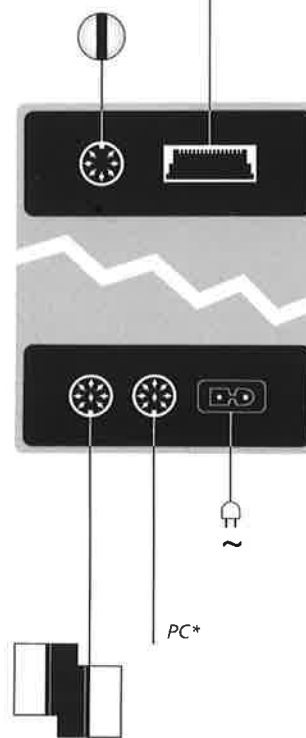

Connect one speaker to the socket marked Power Link and then loop the signals through to the other speaker as described in the User's guide for your speakers.

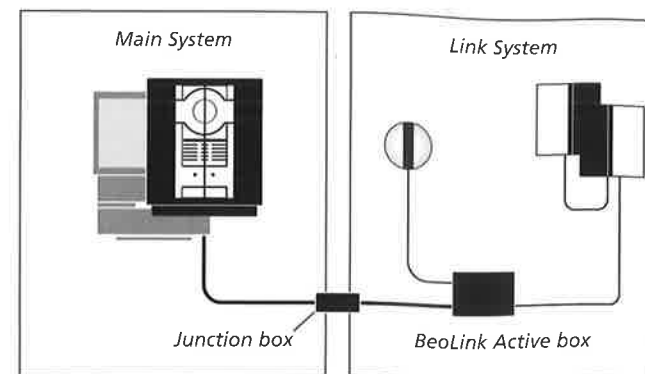

In the link room: Using a Master Link cable, connect the multi-pin plug to the socket marked MASTER LINK on the BeoLink Active box, and run the cable to the junction box.

Using Power Link cables (8-pin DIN), connect your active speakers to the sockets marked POWER LINK. Remember to set the L•R•LINE switch on each speaker to L and R (left and right channel), respectively.

*The socket marked PC is for connection of extra equipment. You must use the Bang & Olufsen cable adaptor to make the connection. For further information, contact your Bang & Olufsen retailer. The PC source is activated via the PC command on your Beo4. You can only select the PC source locally.

In the main room: Using a Master Link cable, connect the flat multi-pin plug to the socket marked MASTER LINK on the main system, and run the cable to the junction box. If a PC source is also connected to your main room TV, you must bring up L-PC from the Beo4 list to activate it in the link room.

Inside the junction box: Join the cables as explained in the documentation enclosed with the box. This document contains information of the many possibilities of the box and how to join the cables.

When you have made all the connections as described in the previous chapter you may start using the system.

However, in order for your setup to function properly, you may need to preprogram it.

Your BeoLink Active can be preprogrammed for the following setup situations (*Options*):

Option 0: To be used if you want to disable remote control operation of the BeoLink Active (to re-enable remote control, select one of the other options).

Option 4: To be used if you install the BeoLink Active in the same room as your main system (e.g. in a large L-shaped living room with two separate listening positions).

Option 5: To be used if you install a TV set in the same room as your BeoLink Active.

Option 6: To be used for a setup with the main system in one room and the BeoLink Active in another, as described in this guide.


Using a Beo6:

- > While holding the • button, press the centre button to bring up the SETUP menu on Beo6.
- > Let go of both buttons.
- > Press Option Pgm to bring up the Option Programming display on Beo6.
- > Press the button that matches the zone in which the BeoLink Active is placed.

Using a Beo4:

- > While holding the • button, press LIST on Beo4.
- > Let go of both buttons.
- > Use the navigation button up or down to bring up OPTION? in the Beo4 display and press the centre button.
- > Use the navigation button up or down to bring up L.OPT in the Beo4 display and press the appropriate number (0, 4, 5 or 6).

NOTE! To ensure correct function of your setup, it is essential that you connect both the main system and the speakers to the mains – before connecting the BeoLink Active box to the mains!

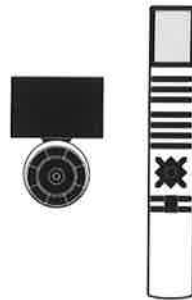

The preprogramming is done with a Bang & Olufsen remote control, and must be carried out with both the main and link system switched to stand-by!

Waste Electrical and Electronic Equipment (WEEE) – Environmental protection



Electrical and electronic equipment, parts and batteries marked with this symbol must not be disposed of with normal household waste; all electrical and electronic equipment, parts and batteries must be collected and disposed of separately.

When disposing of electrical and electronic equipment and batteries by use of the collection systems available in your country, you protect the environment, human health and contribute to the prudent and rational use of natural resources.

Collecting electrical and electronic equipment, batteries and waste prevents the potential contamination of nature with the hazardous substances which may be present in electrical and electronic products and equipment.

Your Bang & Olufsen retailer will advise you of the correct way of disposal in your country.

If a product is too small to be marked with the symbol, it will appear in the User Guide, on the Guarantee certificate, or on the packaging.



This product is in conformity with the provisions of the Directives 2004/108/EC and 2006/95/EC.

All Bang & Olufsen products comply with applicable environmental legislation throughout the world.